

TTH300

Head-mount temperature transmitter



Temperature transmitter for all communications protocols. Redundancy thanks to two inputs.

Measurement made easy

TTH300

Introduction

The TTH300 is available with the HART, PROFIBUS PA and FOUNDATION Fieldbus communications protocols.

The transmitter has global approvals for explosion protection up to zone 0.

The TTH300 implements various NAMUR recommendations, including NE 89 and NE 107.

Safety-relevant applications up to SIL 3 (redundant) are supported in accordance with IEC 61508.

Additional Information

Additional documentation on TTH300 is available for download free of charge at www.abb.com/temperature. Alternatively simply scan this code:



Table of contents

| | | | | | |
|----------|---|-----------|----------|---|-----------|
| 1 | Safety..... | 5 | 6 | Transport and storage | 19 |
| | General information and instructions..... | 5 | | Inspection | 19 |
| | Warnings..... | 5 | | Transporting the device | 19 |
| | Intended use | 6 | | Storing the device..... | 19 |
| | Improper use..... | 6 | | Ambient conditions | 19 |
| | Warranty provisions..... | 6 | | Returning devices | 19 |
| | Notes on data safety | 6 | | | |
| | Manufacturer's address | 6 | | | |
| 2 | Use in potentially explosive atmospheres in accordance with ATEX and IECEx | 7 | 7 | Installation..... | 19 |
| | Ex marking..... | 7 | | Ambient conditions..... | 19 |
| | Transmitter | 7 | | Ambient temperature | 19 |
| | LCD indicator | 7 | | Transport- / Storage temperature..... | 19 |
| | Temperature data | 8 | | Climate class in accordance with DIN EN 60654-1 | 19 |
| | Transmitter | 8 | | Max. permissible humidity in accordance with IEC 60068-2-30 | 19 |
| | LCD indicator | 8 | | Vibration resistance in accordance with IEC 60068-2-6 | 19 |
| | Electrical data | 8 | | Shock resistance in accordance with IEC 60068-2-27 | 19 |
| | Transmitter | 8 | | IP rating | 19 |
| | LCD indicator | 9 | | Installation options | 20 |
| | Installation instructions..... | 9 | | Installation on the measuring inset..... | 20 |
| | ATEX / IECEx | 9 | | Installation in the cover of the connection head | 20 |
| | IP protection rating of housing | 9 | | Installation on the top-hat rail..... | 20 |
| | Electrical connections | 10 | | Installing / removing the optional LCD indicator..... | 21 |
| | Commissioning..... | 12 | | Disassembling the LCD indicator | 21 |
| | Operating instructions..... | 12 | | Installing the LCD indicator | 21 |
| | Protection against electrostatic discharges..... | 12 | | Rotating the LCD indicator | 21 |
| 3 | Use in potentially explosive atmospheres in accordance with FM and CSA | 13 | 8 | Electrical connections | 21 |
| | Ex marking..... | 13 | | Safety instructions | 21 |
| | Transmitter | 13 | | Protection of the transmitter from damage caused by highly energetic electric interferences | 22 |
| | LCD indicator | 13 | | Suited protective measures..... | 22 |
| | Installation instructions..... | 14 | | Conductor material | 22 |
| | FM / CSA | 14 | | Pin assignment..... | 23 |
| | IP protection rating of housing | 14 | | Resistance thermometers (RTD) / resistors (potentiometer) | 23 |
| | Electrical connections | 14 | | Thermocouples / voltages and resistance thermometer (RTD) / thermocouple combinations... | 24 |
| | Commissioning..... | 14 | | Electrical data for inputs and outputs..... | 25 |
| | Operating instructions..... | 14 | | Input - resistance thermometer / resistances | 25 |
| | Protection against electrostatic discharges..... | 14 | | Resistance thermometer | 25 |
| 4 | Design and function | 15 | | Resistance measurement..... | 25 |
| | Input functionality | 15 | | Sensor connection type | 25 |
| | Sensor Redundancy | 15 | | Connection lead | 25 |
| | Sensor drift monitoring | 17 | | Measurement current..... | 25 |
| | Sensor error adjustment in accordance with Callendar-Van Dusen | 17 | | Sensor short circuit | 25 |
| | | | | Sensor wire break | 25 |
| 5 | Product identification | 18 | | Detection of sensor wire break in accordance with NE 89 in all lines..... | 25 |
| | Name plate | 18 | | Sensor error signaling..... | 25 |

| | | | |
|---|-----------|---|----|
| Input - thermocouples / voltages | 25 | Switching to the information level | 39 |
| Types | 25 | Switching to the configuration level (parameterization) | 39 |
| Voltages | 25 | Selecting and changing parameters | 40 |
| Connection lead | 25 | Entry from table | 40 |
| Detection of sensor wire break in accordance with | | Parameter overview HART® (for devices to SW-Rev. 1.03) | 41 |
| NE 89 in all lines | 25 | Parameter description HART® (for | |
| Input resistance | 25 | HART®-devices to SW-Rev. 1.03) | 43 |
| Internal reference junction Pt1000, IEC 60751 Cl. B | 25 | Menu: Device Setup | 43 |
| Sensor error signaling | 25 | Menu: Device Info | 46 |
| Output – HART® | 26 | Menu: Display | 46 |
| Output – PROFIBUS PA® | 26 | Menu: Process Alarm | 47 |
| Output – FOUNDATION Fieldbus® | 27 | Menu: Communication | 47 |
| Power supply | 27 | Menu: Calibrate | 47 |
| Power supply – HART® | 27 | Menu: Diagnosis | 48 |
| Power supply – PROFIBUS / FOUNDATION Fieldbus | 28 | Activating write protection | 48 |
| | | Deactivating write protection | 48 |
| 9 MID Certification | 29 | Parameter overview HART® | |
| TTH300 with MID Certification | 29 | (for HART-devices from SW-Rev. 3.00) | 49 |
| General | 29 | Parameter description HART® | |
| Areas of application, conditions and requirements | 29 | (for HART®-devices from SW-Rev. 3.00) | 52 |
| Installation and Operation | 29 | Menu: Easy Setup | 52 |
| 10 Commissioning | 30 | Menu: Device Setup | 55 |
| General | 30 | Menu: Display | 56 |
| Checks prior to commissioning | 30 | Menu: Process Alarm | 56 |
| Communication | 30 | Menu: Communication | 57 |
| HART® Communication | 30 | Menu: Calibrate | 58 |
| Operating modes | 30 | Menu: Diagnosis | 58 |
| Configuration options / tools | 31 | Menu: Device Info | 59 |
| Diagnosis notice | 31 | Menu: Service | 59 |
| Tracking of events and configuration changes, from | | Enable or disable write protection | 59 |
| SW-Rev. 3.00 | 31 | PROFIBUS PA® und FOUNDATION Fieldbus® Parameter | |
| PROFIBUS® Communication | 31 | overview | 60 |
| Voltage / current consumption | 31 | Parameter description PROFIBUS PA® and | |
| FOUNDATION Fieldbus® Communication | 32 | FOUNDATION Fieldbus® | 61 |
| Voltage / current consumption | 32 | Menu: Device Setup | 61 |
| Basic Setup | 32 | Menu: Device Info | 63 |
| 11 Operation | 33 | Menu: Communication | 63 |
| Safety instructions | 33 | Menu: Service Menu | 64 |
| Hardware settings | 33 | Menu: Display | 65 |
| Devices with HART® from HW-Rev. 2.00 (corresponds | | Menu: Calibrate | 65 |
| to SW-Rev. 3.00 and higher) | 33 | Factory settings | 66 |
| Devices with PROFIBUS PA®, FOUNDATION Fieldbus® | | Firmware settings | 66 |
| and HART® to HW-Rev. 1.07 | 33 | Devices with PROFIBUS PA®, FOUNDATION Fieldbus® | |
| Menu navigation | 34 | and HART® (all SW revisions) | 66 |
| HART® menu levels | 35 | | |
| PROFIBUS PA® and FOUNDATION Fieldbus® H1 menu | | | |
| levels | 36 | | |
| Process display | 37 | | |
| Error messages in the HART® LCD display | 37 | | |
| Error messages in the LCD display PROFIBUS PA® and | | | |
| FOUNDATION Fieldbus® | 38 | | |

| | | |
|-----------|---|-----------|
| 12 | Diagnosis / error messages | 67 |
| | Diagnostic information..... | 67 |
| | Monitoring of operating data..... | 67 |
| | Operating hours statistics | 67 |
| | Calling up the error description | 68 |
| | Possible error messages – HART® devices to SW-Rev. 1.03 | 69 |
| | Possible error messages – HART® devices from SW-Rev. 3.00..... | 71 |
| | Possible error messages – PROFIBUS PA® and FOUNDATION Fieldbus® | 72 |
| 13 | Maintenance..... | 73 |
| | Safety instructions..... | 73 |
| | Cleaning | 73 |
| 14 | Repair | 73 |
| | Safety instructions..... | 73 |
| | Returning devices..... | 73 |
| 15 | Recycling and disposal..... | 74 |
| 16 | Specification | 74 |
| 17 | Additional documents | 74 |
| 18 | Appendix..... | 75 |
| | Return form | 75 |

1 Safety

General information and instructions

These instructions are an important part of the product and must be retained for future reference.

Installation, commissioning, and maintenance of the product may only be performed by trained specialist personnel who have been authorized by the plant operator accordingly. The specialist personnel must have read and understood the manual and must comply with its instructions.

For additional information or if specific problems occur that are not discussed in these instructions, contact the manufacturer. The content of these instructions is neither part of nor an amendment to any previous or existing agreement, promise or legal relationship.

Modifications and repairs to the product may only be performed if expressly permitted by these instructions.

Information and symbols on the product must be observed.

These may not be removed and must be fully legible at all times.

The operating company must strictly observe the applicable national regulations relating to the installation, function testing, repair and maintenance of electrical products.

Warnings

The warnings in these instructions are structured as follows:

DANGER

The signal word '**DANGER**' indicates an imminent danger. Failure to observe this information will result in death or severe injury.

WARNING

The signal word '**WARNING**' indicates an imminent danger. Failure to observe this information may result in death or severe injury.

CAUTION

The signal word '**CAUTION**' indicates an imminent danger. Failure to observe this information may result in minor or moderate injury.

NOTICE

The signal word '**NOTICE**' indicates possible material damage.

Note

'**Note**' indicates useful or important information about the product.

... 1 Safety

Intended use

This device is intended for the following uses:

- To measure the temperature of fluid, pulpy or pasty substances and gases or resistance/voltage values.

The device has been designed for use exclusively within the technical limit values indicated on the name plate and in the data sheets.

- The maximum ambient temperature must not be exceeded.
- The IP rating of the housing must be observed during operation.
- For use in potentially explosive atmospheres, follow the associated guidelines.
- When using as a SIL-device in safety-relevant applications, the SIL Safety Manual should be observed.

Improper use

The following are considered to be instances of especially improper use of the device:

- Material application, for example by painting over the housing, name plate or welding/soldering on parts.
- Material removal, for example by spot drilling the housing.

Warranty provisions

Using the device in a manner that does not fall within the scope of its intended use, disregarding this manual, using underqualified personnel, or making unauthorized alterations releases the manufacturer from liability for any resulting damage. This renders the manufacturer's warranty null and void.

Notes on data safety

This product is designed to be connected to and to communicate information and data via a network interface. It is operator's sole responsibility to provide and continuously ensure a secure connection between the product and your network or any other network (as the case may be). Operator shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc.) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and / or theft of data or information. ABB Automation Products GmbH and its affiliates are not liable for damages and / or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and / or theft of data or information.

Manufacturer's address

ABB Automation Products GmbH
Measurement & Analytics

Schillerstr. 72
32425 Minden
Germany
Tel: +49 571 830-0
Fax: +49 571 830-1806

Customer service center

Tel: +49 180 5 222 580
Email: automation.service@de.abb.com

2 Use in potentially explosive atmospheres in accordance with ATEX and IECEx

Note

- Further information on the approval of devices for use in potentially explosive atmospheres can be found in the explosion protection test certificates (at www.abb.com/temperature).
- Depending on the design, a specific marking in accordance with ATEX or IECEx applies.

Ex marking

Transmitter

ATEX intrinsic safety

The device fulfills the requirements of Directive 2014/34/EU in case of corresponding purchase orders and is approved for use in Zone 0, 1 and 2.

Model TTH300-E1H

To HW-Rev. 1.07:

Type Examination Test Certificate PTB 05 ATEX 2017 X

From HW-Rev. 2.00:

Type Examination Test Certificate See attached information

II 1 G Ex ia IIC T6 Ga

II 2 (1) G Ex [ia IIC Ga] ib IIC T6 Gb

II 2 G (1D) Ex [ia IIIC Da] ib IIC T6 Gb

Model TTH300-E1P and TTH300-E1F

Type Examination Test Certificate PTB 09 ATEX 2016 X

II 1 G Ex ia IIC T6 Ga

II 2 (1) G Ex [ia IIC Ga] ib IIC T6 Gb

II 2 G (1D) Ex [ia IIIC Da] ib IIC T6 Gb

Non-sparking ATEX

The device fulfills the requirements of Directive 2014/34/EU in case of corresponding purchase orders and is approved for use in Zone 2.

Model TTH300-E2X

Declaration of conformity

II 3 G Ex nA IIC T1-T6 Gc

IECEx intrinsic safety

Approved for use in Zone 0, 1, and 2.

Model TTH300-H1H

To HW-Rev. 1.07:

IECEx certificate of conformity IECEx PTB 09.0014X

From HW-Rev. 2.00:

IECEx certificate of conformity See attached information

Model TTH300-H1P and TTH300-H1F

IECEx certificate of conformity IECEx PTB 11.0108X

Ex ia IIC T6...T1 Ga

Ex [ia IIC Ga] ib IIC T6...T1 Gb

Ex [ia IIIC Da] ib IIC T6...T1 Gb

LCD indicator

ATEX intrinsic safety

The device fulfills the requirements of Directive 2014/34/EU in case of corresponding purchase orders and is approved for use in Zone 0, 1 and 2.

Type Examination Test Certificate

PTB 05 ATEX 2079 X

II 1G Ex ia IIC T6 Ga

Non-sparking ATEX

The device fulfills the requirements of Directive 2014/34/EU in case of corresponding purchase orders and is approved for use in Zone 2.

Declaration of conformity

II 3 G Ex nA IIC T1-T6 Gc

IECEx intrinsic safety

Approved for use in Zone 0, 1, and 2.

IECEx certificate of conformity

IECEx PTB 12.0028X

Ex ia IIC T6

... 2 Use in potentially explosive atmospheres in accordance with ATEX and IECEx

Temperature data

Transmitter

ATEX/IECEx intrinsic safety, non-sparking ATEX

| Temperature class | Permissible ambient temperature range | |
|-------------------|---------------------------------------|-----------------------------------|
| | Device category 1 use | Device category 2 / 3 use |
| T6 | -50 to 44 °C (-58 to 111.2 °F) | -50 to 56 °C (-58 to 132.8 °F) |
| T5 | -50 to 56 °C (-58 to 132.8 °F) | -50 to 71 °C (-58 to 159.8 °F) |
| T4-T1 | -50 to 60 °C (-58 to 140.0 °F) | -50 to 85 °C (-58 to 185.0 °F) |

LCD indicator

ATEX/IECEx intrinsic safety, non-sparking ATEX

| Temperature class | Permissible ambient temperature range | |
|-------------------|---------------------------------------|-----------------------------------|
| | Device category 1 use | Device category 2 / 3 use |
| T6 | -40 to 44 °C (-40 to 111.2 °F) | -40 to 56 °C (-40 to 132.8 °F) |
| T5 | -40 to 56 °C (-40 to 132.8 °F) | -40 to 71 °C (-40 to 159.8 °F) |
| T4-T1 | -40 to 60 °C (-40 to 140 °F) | -40 to 85 °C (-40 to 185 °F) |

Electrical data

Transmitter

Intrinsic safety type of protection Ex ia IIC (part 1)

| Power supply circuit* | TTH300-E1H | TTH300-E1P/-H1P | |
|-----------------------|---------------------------------------|--------------------------------------|-------------------------|
| | TTH300-H1H | TTH300-E1F/-H1F | |
| | | FISCO ¹ | ENTITY |
| Max. voltage | U _i = 30 V | U _i ≤ 17.5 V | U _i ≤ 24.0 V |
| Short-circuit current | I _i = 130 mA | I _i ≤ 183 mA ² | I _i ≤ 250 mA |
| Max. power | P _i = 0.8 W | P _i ≤ 2.56 W ² | P _i ≤ 1.2 W |
| Internal inductance | L _i = 160 µH ³ | L _i ≤ 10 µH | L _i ≤ 10 µH |
| Internal capacitance | C _i = 0.57 nF ⁴ | C _i ≤ 5 nF | C _i ≤ 5 nF |

- 1 FISCO according to 60079-27
- 2 II B FISCO: Ii ≤ 380 mA, Pi ≤ 5.32 W
- 3 For HART variant only. From Hardware-Rev. 2.00, previously 0.5 mH
- 4 For HART variant only. From Hardware Rev. 1.07, previously 5 nF

Intrinsic safety type of protection Ex ia IIC (part 2)

TTH300-E1H, TTH300-H1H

| Measurement current circuit | | |
|---|---|------------------------------------|
| | Resistance Thermocouples, voltages thermometers, resistors | |
| Max. voltage | U _o = 6.5 V | U _o = 1.2 V |
| Short-circuit current | I _o = 17.8 mA* | I _o = 50 mA |
| Max. power | P _o = 29 mW** | P _o = 60 mW |
| Internal inductance | L _i ≈ 0 mH (negligible) | L _i ≈ 0 mH (negligible) |
| Internal capacitance | C _i = 49 nF | C _i = 49 nF |
| Maximum permissible external inductance | L _o = 5 mH | L _o = 5 mH |
| Maximum permissible external capacitance | C _o = 1.55 µF | C _o = 1.05 µF |

* From Hardware-Rev. 2.00, previously 25 mA

** From Hardware-Rev. 2.00, previously 38 mW

Intrinsic safety type of protection Ex ia IIC (part 2)**TTH300-E1P, TTH300-H1P, TTH300-E1F, TTH300-H1F****Measurement current circuit**

| | Resistance Thermocouples, voltages thermometers, resistors | |
|---|---|---|
| Max. voltage | $U_o = 6.5 \text{ V}$ | $U_o = 1.2 \text{ V}$ |
| Short-circuit current | $I_o = 25 \text{ mA}$ | $I_o = 50 \text{ mA}$ |
| Max. power | $P_o = 38 \text{ mW}$ | $P_o = 60 \text{ mW}$ |
| Internal inductance | $L_i \approx 0 \text{ mH (negligible)}$ | $L_i \approx 0 \text{ mH (negligible)}$ |
| Internal capacitance | $C_i = 49 \text{ nF}$ | $C_i = 49 \text{ nF}$ |
| Maximum permissible external inductance | $L_o = 5 \text{ mH}$ | $L_o = 5 \text{ mH}$ |
| Maximum permissible external capacitance | $C_o = 1.55 \text{ }\mu\text{F}$ | $C_o = 1.05 \text{ }\mu\text{F}$ |

Intrinsic safety type of protection Ex ia IIC (part 3)**LCD indicator interface**

| | |
|--|---|
| Max. voltage | $U_o = 6.2 \text{ V}$ |
| Short-circuit current | $I_o = 65.2 \text{ mA}$ |
| Max. power | $P_o = 101 \text{ mW}$ |
| Internal inductance | $L_i \approx 0 \text{ mH (negligible)}$ |
| Internal capacitance | $C_i \approx 0 \text{ nF (negligible)}$ |
| Maximum permissible external inductance | $L_o = 5 \text{ mH}$ |
| Maximum permissible external capacitance | $C_o = 1.4 \text{ }\mu\text{F}$ |

LCD indicator**Intrinsic safety type of protection Ex ia IIC****Supply circuit**

| | |
|-----------------------|---|
| Max. voltage | $U_i = 9 \text{ V}$ |
| Short-circuit current | $I_i = 65.2 \text{ mA}$ |
| Max. power | $P_i = 101 \text{ mW}$ |
| Internal inductance | $L_i \approx 0 \text{ mH (negligible)}$ |
| Internal capacitance | $C_i \approx 0 \text{ nF (negligible)}$ |

Installation instructions**ATEX / IECEx**

The installation, commissioning, maintenance and repair of devices in potentially explosive atmospheres must only be carried out by appropriately trained personnel. Works may be carried out only by persons, whose training has included instructions on different types of protection and installation techniques, concerned rules and regulations as well as general principles of zoning. The person must possess the appropriate competences for the type of work to be conducted.

When operating with combustible dusts, comply with EN 60079-31.

The safety instructions for electrical apparatus in potentially explosive areas must be in accordance with Directive 2014/34/EU (ATEX) and IEC 60079-14 (Installation of electrical equipment in potentially explosive areas).

Comply with the applicable regulations for the protection of employees to ensure safe operation.

IP protection rating of housing

The temperature transmitter and LCD indicator Type A and Type AS must be installed such that an IP rating of at least IP 20 is achieved in accordance with IEC 60529.

... 2 Use in potentially explosive atmospheres in accordance with ATEX and IECEx

... Installation instructions

Electrical connections

Grounding

If, for functional reasons, the intrinsically safe circuit needs to be grounded by means of a connection to the potential equalization, it may only be grounded at one point.

Intrinsic safety installation check

If transmitters are operated in an intrinsically safe circuit, proof that the interconnection is intrinsically safe must be provided in accordance with IEC/EN 60079-14 as well as IEC/EN 60079-25. The supply isolators / DCS inputs must feature intrinsically safe input protection circuits in order to eliminate hazards (spark formation).

In order to provide proof of intrinsic safety, the electrical limit value must be used as the basis for the EC-type examination certificates for the equipment (devices); this includes the capacitance and inductance values of the cables.

Proof of intrinsic safety is said to have been provided if the following conditions are fulfilled when a comparison is carried out in relation to the limit values of the equipment:

| Transmitter (intrinsically safe equipment) | Supply isolator / DCS input (related equipment) |
|---|--|
| | $U_i \geq U_o$ |
| | $I_i \geq I_o$ |
| | $P_i \geq P_o$ |
| | $L_i + L_c \text{ (cable)} \leq L_o$ |
| | $C_i + C_c \text{ (cable)} \leq C_o$ |

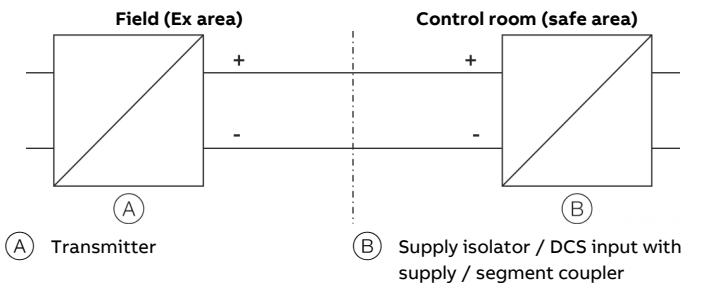


Figure 1: Intrinsic safety installation check

Installation in a potentially explosive atmosphere

Transmitters can be installed in all kinds of industrial sectors. Potentially explosive systems are divided into zones, meaning that a wide range of different instruments are also required. For this, pay attention to the country-specific guidelines and certificates!

Note

Ex relevant specifications must be taken from the EC-type examination certificates and other relevant certificates that apply in each case.

With transmitters for PROFIBUS PA and FOUNDATION Fieldbus H1 applications, FISCO interconnection methods can be used.

ATEX – Zone 0

Designation: II 1 G Ex ia IIC T6 Ga

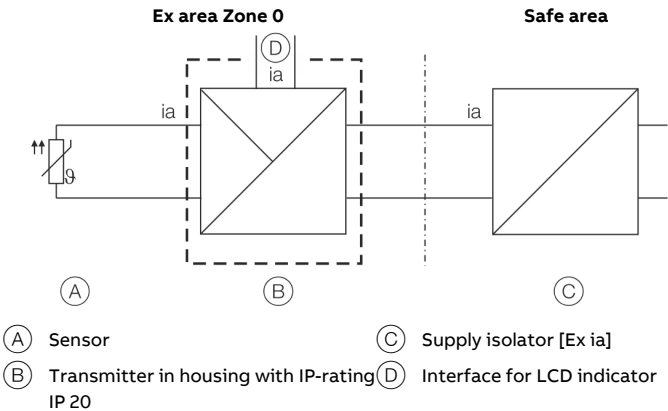


Figure 2: Hookup in ATEX – Zone 0

When using the transmitter in Zone 0, it must be installed in a suitable housing with IP rating IP 20.


The input for the supply isolator must be designed with ‘Ex ia’ type of protection.

When using the transmitter in Zone 0, make sure that impermissible electrostatic charging of the transmitter is avoided (observe the warnings on the device). As the user, it is your responsibility to ensure that the sensor instrumentation meets the requirements of applicable explosion protection standards.

Note

When operating the transmitter in Zone 0 (EPL ‘Ga’), the compatibility of the device materials with the surrounding atmosphere must be ensured.

Encapsulation material used for the transmitter:
Polyurethane (PUR), WEVO PU-417

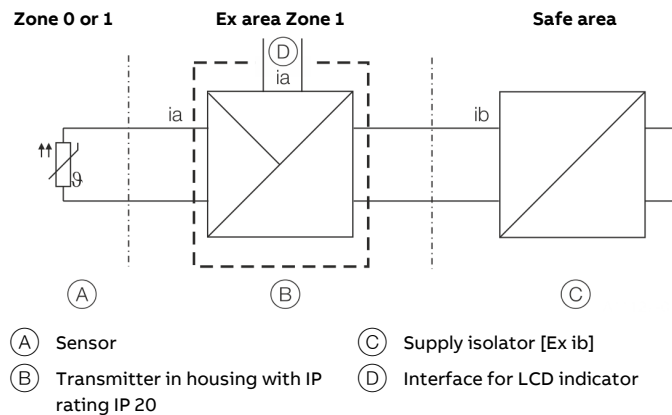
ATEX – Zone 1 (0)**Marking: II 2 (1) G Ex [ia IIC Ga] ib IIC T6 Gb****Figure 3: Hookup in ATEX - Zone 1 (0)**

When using the transmitter in Zone 1, it must be installed in a suitable housing with IP -rating IP 20.

The input for the supply isolator must be designed with 'Ex ib' type of protection.

As the user, it is your responsibility to ensure that the sensor instrumentation meets the requirements of applicable explosion protection standards. The sensor can be installed in Zone 1 or Zone 0.

When using the transmitter in Zone 1, you must ensure that impermissible electrostatic charging of the temperature transmitter is prevented (observe the warnings on the device).

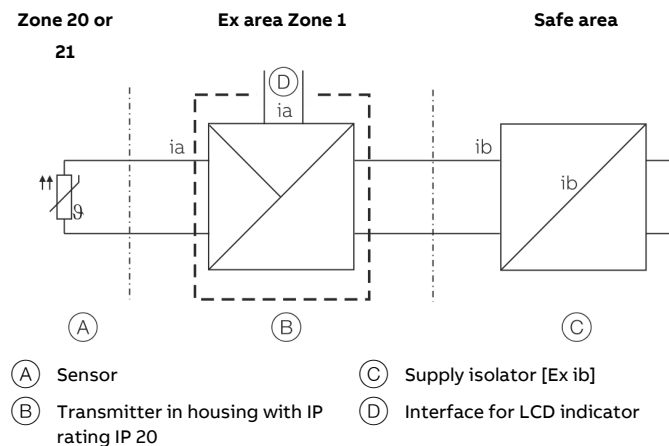ATEX – Zone 1 (20)**Marking: II 2 G (1D) Ex [ia IIIC Da] ib IIC T6 Gb****Figure 4: Hookup in ATEX - Zone 1 (20)**

When using the transmitter in Zone 1, it must be installed in a suitable housing with IP -rating IP 20.

The input for the supply isolator must be designed with 'Ex ib' type of protection.

As the user, it is your responsibility to ensure that the sensor instrumentation meets the requirements of applicable explosion protection standards. The sensor can be installed in Zone 20 or Zone 21.

When using the transmitter in Zone 1, make sure that impermissible electrostatic charging of the temperature transmitter is avoided (observe the warnings on the device).

... 2 Use in potentially explosive atmospheres in accordance with ATEX and IECEx

... Installation instructions

ATEX – Zone 2

Designation: II 3 G Ex nA IIC T1-T6 Gc

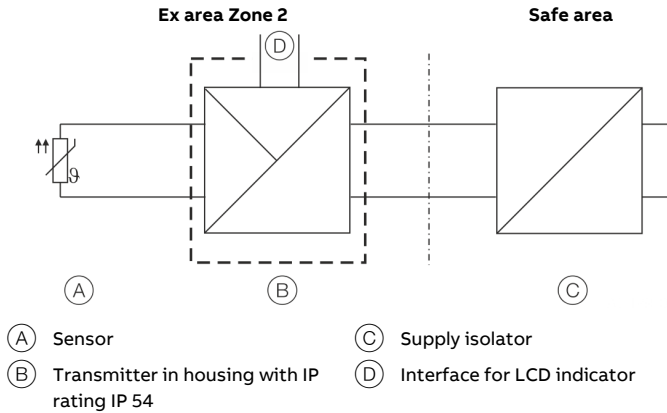


Figure 5: Hookup in ATEX – Zone 2

When using the transmitter in Zone 2, observe the following:

- The temperature transmitter must be installed in its own housing. This housing must at least meet IP rating IP 54 (in accordance with EN 60529) and other requirements for potentially explosive atmosphere (e.g. a certified housing).
- External measures must be made for the power supply circuit in order to prevent the rated voltage from being up-scaled by more than 40 % in the event of transient disturbances.
- The electrical connections must only be opened or closed when there is no hazardous atmosphere.
- When using the transmitter in Zone 2, make sure that impermissible electrostatic charging of the temperature transmitter is prevented (observe the warnings on the device).

Commissioning

The commissioning and parameterization of the device may also be carried out in potentially explosive atmospheres using a handheld terminal that has been approved accordingly under consideration of an intrinsic safety installation check. Alternatively, an Ex modem can be connected to the circuit outside the potentially explosive atmosphere.

Operating instructions

Protection against electrostatic discharges

The plastic parts inside the device can store electrostatic charges.

Make sure that no electrostatic charges can accumulate when handling the device.

3 Use in potentially explosive atmospheres in accordance with FM and CSA

Note

- Further information on the approval of devices for use in potentially explosive atmospheres can be found in the explosion protection test certificates (at www.abb.com/temperature).
- Depending on the design, a specific marking in accordance with FM or CSA applies.

Ex marking

Transmitter

FM Intrinsically Safe

Model TTH300-L1H

To HW-Rev. 1.07:

Control Drawing SAP_214829

From HW-Rev. 2.00:

Control Drawing See attached information

Model TTH300-L1P

Control Drawing TTH300-L1P (IS)

Model TTH300-L1F

Control Drawing TTH300-L1F (IS)

Class I, Div. 1 + 2, Groups A, B, C, D

Class I, Zone 0, AEx ia IIC T6

FM Non-Incendive

Model TTH300-L2H

To HW-Rev. 1.07:

Control Drawing 214831 (Non-Incendive)

From HW-Rev. 2.00:

Control Drawing See attached information

Model TTH300-L2P

Control Drawing TTH300-L2P (NI_PS)

TTH300-L2P (NI_AA)

Model TTH300-L2F

Control Drawing TTH300-L2F (NI_PS)

TTH300-L2F (NI_AA)

Class I, Div. 2, Groups A, B, C, D

CSA Intrinsically Safe

Model TTH300-R1H

To HW-Rev. 1.07:

Control Drawing 214826

From HW-Rev. 2.00:

Control Drawing See attached information

Model TTH300-R1P

Control Drawing TTH300-R1P (IS)

Model TTH300-R1F

Control Drawing TTH300-R1F (IS)

Class I, Div. 1 + 2, Groups A, B, C, D

Class I, Zone 0, Ex ia IIC T6

CSA Non-Incendive

Model TTH300-R2H

To HW-Rev. 1.07:

SAP_214824 (Non-Incendive)

Control Drawing

SAP_214896 (Non-Incendive)

From HW-Rev. 2.00:

See attached information

Control Drawing

Model TTH300-R2P

Control Drawing TTH300-R2P (NI_PS)

TTH300-R2P (NI_AA)

Model TTH300-R2F

Control Drawing TTH300-R2F (NI_PS)

TTH300-R2F (NI_AA)

Class I, Div. 2, Groups A, B, C, D

LCD indicator

FM Intrinsically Safe

Control Drawing SAP_214 748

I.S. Class I Div 1 and Div 2, Group: A, B, C, D or

I.S. Class I Zone 0 AEx ia IIC T*

$U_i / V_{max} = 9 \text{ V}$, $I_i / I_{max} < 65.2 \text{ mA}$, $P_i = 101 \text{ mW}$, $C_i = 0.4 \mu\text{F}$, $L_i = 0$

FM Non-Incendive

Control Drawing SAP_214 751

N.I. Class I Div 2, Group: A, B, C, D oder Ex nL IIC T**, Class I Zone 2

$U_i / V_{max} = 9 \text{ V}$, $I_i / I_{max} < 65.2 \text{ mA}$, $P_i = 101 \text{ mW}$, $C_i = 0.4 \mu\text{F}$, $L_i = 0$

CSA Intrinsically Safe

Control Drawing SAP_214 749

I.S. Class I Div 1 and Div 2; Group: A, B, C, D or

I.S. Zone 0 Ex ia IIC T*

$U_i / V_{max} = 9 \text{ V}$, $I_i / I_{max} < 65.2 \text{ mA}$, $P_i = 101 \text{ mW}$, $C_i < 0.4 \mu\text{F}$, $L_i = 0$

CSA Non-Incendive

Control Drawing SAP_214 750

N.I. Class I Div 2, Group: A, B, C, D oder Ex nL IIC T**, Class I Zone 2

$U_i / V_{max} = 9 \text{ V}$, $I_i / I_{max} < 65.2 \text{ mA}$, $P_i = 101 \text{ mW}$, $C_i < 0.4 \mu\text{F}$, $L_i = 0$

* Temp. Ident: T6 T_{amb} 56 °C, T4 T_{amb} 85 °C

** Temp. Ident: T6 T_{amb} 60 °C, T4 T_{amb} 85 °C

... 3 Use in potentially explosive atmospheres in accordance with FM and CSA

Installation instructions

FM / CSA

The installation, commissioning, maintenance and repair of devices in areas with explosion hazard must only be carried out by appropriately trained personnel.
The operator must strictly observe the applicable national regulations with regard to installation, function tests, repairs, and maintenance of electrical devices. (e. g. NEC, CEC).

IP protection rating of housing

The temperature transmitter and LCD indicator Type A and Type AS must be installed such that an IP rating of at least IP 20 is achieved in accordance with IEC 60529.

Electrical connections

Grounding

If, for functional reasons, the intrinsically safe circuit needs to be grounded by means of a connection to the potential equalization, it may only be grounded at one point.

Intrinsic safety installation check

If transmitters are operated in an intrinsically safe circuit, proof that the interconnection is intrinsically safe must be provided in accordance with IEC/EN 60079-14 as well as IEC/EN 60079-25. The supply isolators / DCS inputs must feature intrinsically safe input protection circuits in order to eliminate hazards (spark formation).
In order to provide proof of intrinsic safety, the electrical limit value must be used as the basis for the EC-type examination certificates for the equipment (devices); this includes the capacitance and inductance values of the cables.

Note

When operating the transmitter in Zone 0, the compatibility of the device materials with the surrounding atmosphere must be guaranteed.
Encapsulation material used for the transmitter: Polyurethane (PUR), WEVO PU-417

Proof of intrinsic safety is said to have been provided if the following conditions are fulfilled when a comparison is carried out in relation to the limit values of the equipment:

| Transmitter (intrinsically safe equipment) | Supply isolator / DCS input (related equipment) |
|---|--|
| $U_i \geq U_o$ | |
| $I_i \geq I_o$ | |
| $P_i \geq P_o$ | |
| $L_i + L_c \text{ (cable)} \leq L_o$ | |
| $C_i + C_c \text{ (cable)} \leq C_o$ | |

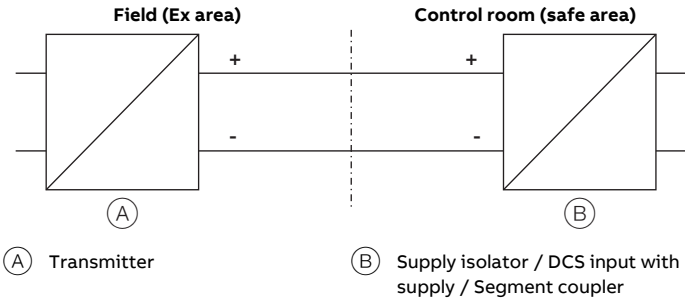


Figure 6: Intrinsic safety installation check

Installation in a potentially explosive atmosphere

Transmitters can be installed in all kinds of industrial sectors. Potentially explosive systems are divided into zones, meaning that a wide range of different instruments are also required. For this, pay attention to the country-specific guidelines and certificates!

Note

Ex relevant specifications must be taken from the EC-type examination certificates and other relevant certificates that apply in each case.

With transmitters for PROFIBUS PA and FOUNDATION Fieldbus H1 applications, FISCO interconnection methods can be used.

Commissioning

The commissioning and parameterization of the device may also be carried out in potentially explosive atmospheres using a handheld terminal that has been approved accordingly under consideration of an intrinsic safety installation check. Alternatively, an Ex modem can be connected to the circuit outside the potentially explosive atmosphere.

Operating instructions

Protection against electrostatic discharges

The plastic parts inside the device can store electrostatic charges.

Make sure that no electrostatic charges can accumulate when handling the device.

4 Design and function

Digital transmitters are communication-ready devices with microprocessor-controlled electronics. They conform to the requirements of IP rating IP 20 and are suited for integration into DIN A and DIN B sensor heads.

With HART® transmitters, an FSK signal is superimposed on the 4 to 20 mA output signal in accordance with the HART standard to facilitate bidirectional communication.

With PROFIBUS PA® transmitters, communication takes place in accordance with PROFIBUS-MBP (IEC 61158-2), PROFIBUS PA Profile 3.01.

In the case of the FOUNDATION Fieldbus® transmitter, communication takes place in accordance with FOUNDATION Fieldbus H1 (IEC 61158-2), ITK version 6.x (from SW-Rev. 1.02.00, previously ITK 5.x).

The transmitters can be configured using various tools / drivers. Status and measured values can also be queried. This includes DTM, EDD and FDI package of Field Information Manager (FIM). These tools provide an event monitor and a configuration monitor for HART devices from SW-Rev. 3.00. This allows critical events such as exceeding or falling below specified limit values and configuration changes to be output and logged. See the HART interface description (COM/TTX300/HART).

As an option, the transmitter can be fitted with a type A or a type AS LCD indicator. Type AS is used exclusively for visualizing current process values. Type A also supports the option of configuring the transmitter. It is recommended that you use this combination.

The electrical connection between the LCD display and transmitter is provided by a 6-pin flat ribbon cable with a plug connector. The LCD display can only be operated when connected to transmitters that have an LCD display interface.

Input functionality

Sensor Redundancy

To enhance system availability, the TTH300 has two sensor inputs.

The second sensor input can be used redundantly for both resistance thermometers (2 x three-wire circuit or 2 x two-wire circuit) and thermocouples or a combination of both. If a combination of both is used, the resistance sensor must be connected to channel 1 and the thermocouple to channel 2, see

Electrical connections on page 21.

In the case of HART devices, the failure of a sensor can be signaled with a configurable analog alarm pulse, see the HART® interface description (COM/TTX300/HART).

Devices with PROFIBUS PA®, FOUNDATION Fieldbus® and HART® to SW-Rev. 1.03

Sensor redundancy / sensor backup for increased availability

In the case of sensor redundancy (sensor backup), the temperature is always measured with both sensors and the mean value is calculated from this if the sensors are identical. This value is provided at the output of the transmitter. If the sensors are not identical, the measured value of channel 1 (resistance thermometer) is output. If one sensor fails, the temperature measurement of the remaining sensor is transmitted bumplessly to the output of the transmitter. A corresponding diagnostic message is available via DTM, EDD, FDI Package (FIM) or on the LCD display. The measured value remains available and maintenance measures can be taken at the same time.

Devices with HART® from SW-Rev. 3.00

Extended configuration options are available for redundant operation.

The redundancy behavior can be configured for

- increased availability (default setting ex works for redundancy),
- increased safety and
- increased accuracy (output of the mean value).

... 4 Design and function

... Input functionality

| Redundancy behavior | Output behavior (behavior of the current output) | Current output assignment to be set (Tools: "HART Mapping") | Redundancy configuration to be set (Tools: "Parameter setting") | Diagnostic message to be set according to NAMUR NE 107 |
|---|--|---|---|--|
| Increased availability (Switchover for defective sensor) | <p>Normal operation: Output signal follows sensor 1</p> <p>Sensor 1 defective: Switching seamlessly (with smooth transition) to sensor 2. Output signal remains valid.</p> <p>Sensor 1 and sensor 2 defective: output of set alarm current</p> | "Redundancy" | "Availability" | <p>Redundancy, S1 not available: "Maintenance Required"</p> <p>Redundancy, S2 not available: "Maintenance Required"</p> <p>Sensor drift detected: "Maintenance Required"</p> |
| Increased safety (use of drift detection) | <p>Normal operation: Output signal follows sensor 1</p> <p>Sensor 1 or sensor 2 defective: output of set alarm current</p> <p>Sensor drift detected: output of set alarm current</p> | "Redundancy" | "Safety" | <p>Redundancy, S1 not available: "Failure"</p> <p>Redundancy, S2 not available: "Failure"</p> <p>Sensor drift detected: "Failure"</p> |
| Increased accuracy (through averaging) | <p>Output signal follows the arithmetic mean value of sensor 1 and sensor 2</p> <p>Sensor 1 or sensor 2 defective: output of set alarm current</p> | "Mean value" | not relevant | <p>Redundancy, S1 not available: "Failure"</p> <p>Redundancy, S2 not available: "Failure"</p> <p>Sensor drift detected: "Maintenance Required"</p> |

Corresponding diagnostic messages are available via DTM, EDD, FDI package (FIM) or on the LCD display.

For the meaning of the diagnostic messages according to NAMUR 107, see **Error messages in the HART® LCD display** on page 37. The error messages and options for error correction are listed in **Possible error messages – HART® devices from SW-Rev. 3.00** on page 71.

Note

Only the current output behavior and redundancy configuration can be set for the three redundancy behaviors via the HMI LCD display with configuration function. The diagnostic messages according to NAMUR NE 107 can only be changed over in the tools and remain in the default setting ex works ("Maintenance Required").

Sensor drift monitoring

If two sensors are connected, sensor drift monitoring can be FDI Package (FIM) enabled via DTM, EDD or

The sensor drift monitoring can be activated for the following sensor types:

- 2 × resistance thermometer (RTD), two-wire circuit
- 2 × resistance thermometer (RTD), three-wire circuit
- 2 × resistors (potentiometer), two-wire circuit
- 2 × resistors (potentiometer), three-wire circuit
- 2 × thermocouple
- 2 × voltages
- 1 × resistance thermometer (RTD), two-wire circuit, and 1 × thermocouple
- 1 × resistance thermometer (RTD), three-wire circuit, and 1 × thermocouple
- 1 × resistance thermometer (RTD), four-wire circuit, and 1 × thermocouple

To activate sensor drift monitoring, the transmitter must first be configured for the sensor types referred to above. Following this, the maximum permissible sensor deviation must be configured, e.g., 1 K.

Since sensor response times may differ slightly, it is then necessary to configure a limit time period during which the sensor deviation has to constantly exceed the maximum set.

If the transmitter registers a larger sensor deviation over the defined period of time, the diagnostic response configured in accordance with NE 107 is carried out (tools and LCD display).

Sensor drift monitoring with redundancy operation (devices with PROFIBUS PA®, FOUNDATION Fieldbus® and HART® to SW-Rev. 1.03)

If drift monitoring is performed for similar sensors (2 × resistance thermometers or 2 × thermocouples), the mean value from both sensors is mapped on the output signal of the transmitter as a process variable in redundancy mode.

If a thermocouple is used for drift monitoring of a resistance thermometer, the resistance thermometer must be connected to channel 1 and the thermocouple to channel 2 (see **Electrical connections** on page 21). The measured value of channel 1 (resistance thermometer) is mapped as process variable at the transmitter output.

Sensor drift monitoring with redundancy operation (devices with HART® from SW-Rev. 3.00)

If a thermocouple is used for drift monitoring of a resistance thermometer, the resistance thermometer must be connected to channel 1 and the thermocouple to channel 2 (see **Electrical connections** on page 21).

The transmitter output signal always corresponds to the configured redundancy behavior, see **Sensor Redundancy** on page 15.

Note

Before configuring the maximum permissible sensor deviation with regard to drift monitoring, sensor calibration should be carried out with reference to the sensor channel 1 value using the TTH300 DTM, for example.

Sensor error adjustment in accordance with Callendar-Van Dusen

Under normal circumstances, the standard Pt100 characteristic curve is used for resistance thermometer measurement. However, recent advances in technology now mean that maximum measuring accuracy can be achieved where necessary by carrying out individual sensor error adjustment.

Sensor characteristic curves are optimized by using a Pt100 polynomial in accordance with IST-90 / IEC 751, and EN 60150, and by applying A, B, C, or Callendar-Van Dusen coefficients.

With the help of the DTM, EDD or FDI package (FIM), these sensor coefficients (Callendar-Van Dusen) can be adjusted and stored in the transmitter as a CVD characteristic curve. Up to five different CVD characteristic curves can be stored for HART and PROFIBUS PA, while up to two CVD characteristic curves can be stored for FOUNDATION Fieldbus.

5 Product identification

Name plate

Note



Products that are marked with the adjacent symbol may **not** be disposed of as unsorted municipal waste (domestic waste). They should be disposed of through separate collection of electric and electronic devices.

Note

The ambient temperature range ⑭ provided on the name plate refers only to the transmitter itself and not to the sensor element used in the measuring inset.

For devices with PROFIBUS PA or FOUNDATION Fieldbus, the device-ID is also specified.

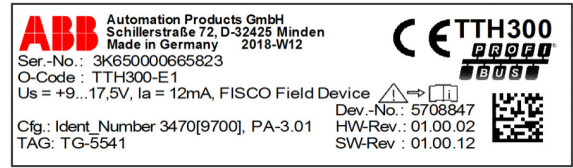


Figure 8: PROFIBUS PA name plate (example)


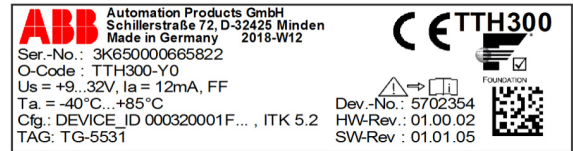


Figure 9: FOUNDATION Fieldbus name plate (example)

Devices with an explosion-proof design are marked with the following special data plate.

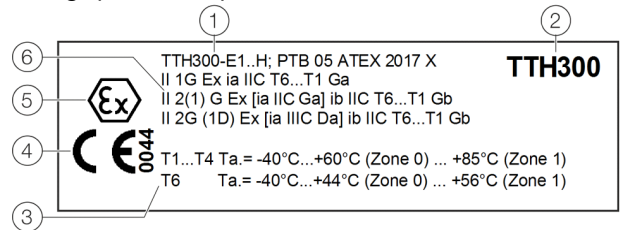


- | | |
|---|---|
| ① Type designation in accordance with approval | ④ CE-mark (EU conformity) and notified body for quality assurance |
| ② Type designation | ⑤ Ex-marking |
| ③ Temperature class of the explosion-proof design | ⑥ IP rating explosion-proof design |

Figure 10: Additional plate for explosion-protected apparatus (example)

Note

The name plates displayed are examples. The device identification plates affixed to the device can differ from this representation.

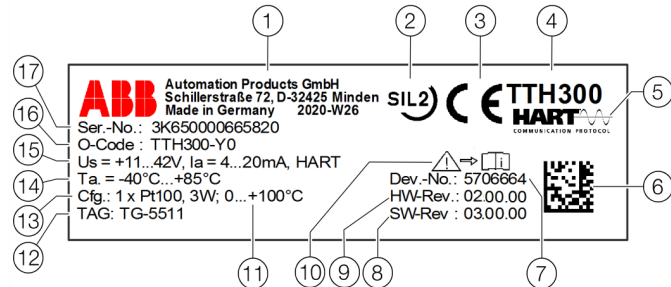

- ① Manufacturer, manufacturer address, manufacturing year - week
- ② Safety integrity level, SIL logo (optional with HART transmitter)
- ③ CE mark (EU conformity), if not on additional plate
- ④ Type designation / model
- ⑤ Transmitter communications protocol (HART, FF, PA)
- ⑥ 2D barcode for serial number in accordance with order
- ⑦ Serial number of the device electronics (7 or 8 digits)
- ⑧ Software revision
- ⑨ Hardware version
- ⑩ 'Follow product documentation' symbol
- ⑪ ⑫ ⑬ **HART transmitter:**
- ⑪ Set measuring range of the transmitter
- ⑫ Measuring point tag (TAG) in accordance with order (optional)
- ⑬ Set sensor type and circuit type
- ⑫ ⑬ **Transmitter FOUNDATION Fieldbus or PROFIBUS PA:**
- ⑫ Measuring point tag (TAG) in accordance with order (optional)
- ⑬ DEVICE_ID or Ident_Number
- ⑭ Ambient temperature range, on additional plate for Ex versions
- ⑮ Transmitter specification (supply voltage range, output current range, communications protocol)
- ⑯ Coding of the type of protection of the device (in accordance with ordering information)
- ⑰ Serial number of the device (serial number in accordance with order)

Figure 7: HART name plate (example)

6 Transport and storage

Inspection

Check the devices immediately after unpacking for possible damage that may have occurred from improper transport. Details of any damage that has occurred in transit must be recorded on the transport documents.

All claims for damages must be submitted to the shipper without delay and before installation.

Transporting the device

Observe the following instructions:

- Do not expose the device to humidity during transport. Pack the device accordingly.
- Pack the device so that it is protected against vibrations during transport, for example, by using air-cushioned packing.

Storing the device

Bear the following points in mind when storing devices:

- Store the device in its original packaging in a dry and dust-free location.
- Observe the permitted ambient conditions for transport and storage.
- Avoid storing the device in direct sunlight.
- In principle, the devices may be stored for an unlimited period. However, the warranty conditions stipulated in the order confirmation of the supplier apply.

Ambient conditions

The ambient conditions for the transport and storage of the device correspond to the ambient conditions for operation of the device.

Adhere to the device data sheet!

Returning devices

For the return of devices, follow the instructions in **Repair** on page 73.

7 Installation

DANGER

Improper installation and commissioning of the device carries a risk of explosion.

For use in potentially explosive atmospheres, observe the information in **Use in potentially explosive atmospheres in accordance with ATEX and IECEx** on page 7 and **Use in potentially explosive atmospheres in accordance with FM and CSA** on page 13!

Ambient conditions

Ambient temperature

- Default: –40 to 85 °C (–40 to 185 °F)
- Optional: –50 to 85 °C (–58 to 185 °F)
- Restricted range during operation with LCD-indicator: –20 to 70 °C (–4 to 158 °F)
- Restricted range during operation with explosion-proof design: see corresponding certificate

Transport- / Storage temperature

–50 to 85 °C (–58 to 185 °F)

Climate class in accordance with DIN EN 60654-1

Cx –40 to 85 °C (–40 to 185 °F) at 5 to 95 % relative air humidity

Max. permissible humidity in accordance with IEC 60068-2-30

100 % relative air humidity

Vibration resistance in accordance with IEC 60068-2-6

10 to 2000 Hz at 5 g, during operation and transport

Shock resistance in accordance with IEC 60068-2-27

gn = 30, during operation and transport

IP rating

- Power supply circuit: IP 20
- Measurement current circuit: IP 00 or IP-rating of installation housing

... 7 Installation

Installation options

There are three options for installing the transmitter:

- Installation in the cover of the connection head (without springs)
- Direct installation on the measuring inset (with springs)
- Installation on a top-hat rail

Installation on the measuring inset

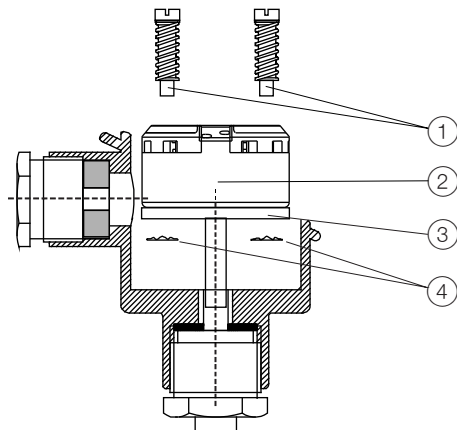


Figure 11: Installation example

Note

Before mounting the transmitter on the measuring inset, remove the ceramic block on the measuring inset and the captive screws in the transmitter.

To install the transmitter on the measuring inset, cambered toothed discs and the corresponding mounting screws are required; these must be ordered as separate accessories:

Measuring inset installation set (2 fixing screws, 2 springs, 2 toothed discs) order number: 263750

1. Remove the ceramic block from the measuring inset (3).
2. Remove the screws from the transmitter (2). Remove the sleeves from the screw holes and then remove the screws.
3. Insert new fixing screws (1) from above in the fixing holes of the transmitter.
4. Place the cambered toothed discs (4) with curve facing upward on the downward protruding screw thread.
5. Connect the power supply cable to the transmitter according to connection diagram.
6. Place the transmitter in the housing on the measuring inset and secure it.

Note

The toothed discs between measuring inset and transmitter are straightened when the screws are tightened. This enables them to grip the mounting screws.

Installation in the cover of the connection head

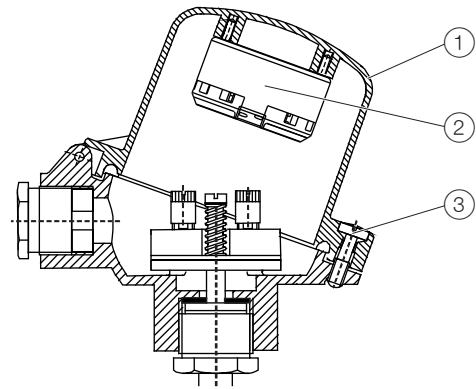


Figure 12: Installation example

1. Release the screw plug (3) for the cover of the connection head.
2. Open the cover (1).
3. Secure the transmitter (2) at the proper position on the cover, using the captive screws found in the transmitter.

Installation on the top-hat rail

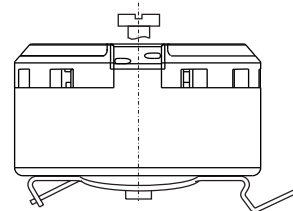


Figure 13: Installation example

When mounted on a top-hat rail, the transmitter can be placed at a distance from the sensor in a housing that is suitable for the ambient conditions.

Installing / removing the optional LCD indicator

The transmitter can be optionally equipped with an LCD indicator.

NOTICE

Damage to the LCD indicator caused by incorrect installation / disassembly

The flat ribbon cable of the LCD indicator can become damaged due to incorrect installation / disassembly.

- Make sure the flat ribbon cable does not get twisted or torn when installing / disassembling or rotating the LCD indicator.

Disassembling the LCD indicator

The indicator must be removed to enable connection of the sensor line or supply line:

Carefully remove the LCD indicator from the transmitter inset. The LCD indicator is held firmly in place, meaning that you may have to use the tip of a screwdriver to pry it loose. Take care to avoid any mechanical damage.

Installing the LCD indicator

No tools are required to install the LCD indicator.

1. Carefully insert the guide pins for the LCD indicator in the guide holes of the transmitter inset. Make sure the black connection socket fits into the terminal on the transmitter inset.
2. Then press the LCD indicator in as far as it will go. Make sure that the guide pins and connection socket are fully inserted.

Rotating the LCD indicator

The position of the LCD indicator can be adjusted to suit the mounting position of the transmitter, to ensure that the display is as clearly legible as possible.

There are twelve positions at increments of 30°.

1. Carefully turn the LCD indicator to the left to release it from its holder.
2. Carefully turn the LCD indicator until the required position is reached.
3. Insert the LCD indicator into its holder again and turn it to the right into the required position until it snaps into place.

8 Electrical connections

Safety instructions

DANGER

Improper installation and commissioning of the device carries a risk of explosion.

For use in potentially explosive atmospheres, observe the information in **Use in potentially explosive atmospheres in accordance with ATEX and IECEx** on page 7 and **Use in potentially explosive atmospheres in accordance with FM and CSA** on page 13!

Observe the following instructions:

- The electrical connection may only be established by authorized specialist personnel and in accordance with the connection diagrams.
- The relevant regulations must be observed during electric installation.
- The electrical connection information in the instruction must be observed; otherwise, the electric IP rating may be adversely affected.
- Safe isolation of electric circuits which are dangerous if touched is ensured only if the connected devices satisfy the requirements of DIN EN 61140 (VDE 0140 Part 1) (basic requirements for safe isolation).
- To ensure safe isolation, install connection leads separate from electric circuits which are dangerous if touched, or implement additional insulation measures.
- Connections must only be established in a dead-voltage state!
- The transmitter has no switch-off elements. Therefore, overcurrent protective devices, lightning protection, or voltage disconnection options must be provided with the installation.
- The power supply and signal are routed in the same conductor and should be implemented as a SELV or PELV circuit in accordance with the relevant standard (standard version). For the explosion-proof design, the guidelines in accordance with the Ex standard must be adhered to.
- You need to check that the available power supply corresponds to the information on the name plate.

Note

The signal cable wires must be provided with wire end sleeves. The slotted screws of the connection terminals are tightened with a size 1 screwdriver (3.5 or 4 mm).

... 8 Electrical connections


Protection of the transmitter from damage caused by highly energetic electric interferences

The transmitter has no switch-off elements. Therefore, overcurrent protective devices, lightning protection, or voltage disconnection options must be provided at the plant. For the shielding and grounding of the device and the connection cable, observe **Pin assignment** on page 23.

NOTICE

Temperature transmitter damage!

Overvoltage, overcurrent and high-frequency interference signals on the supply connection as well as sensor connection side of the device can damage the temperature transmitter.

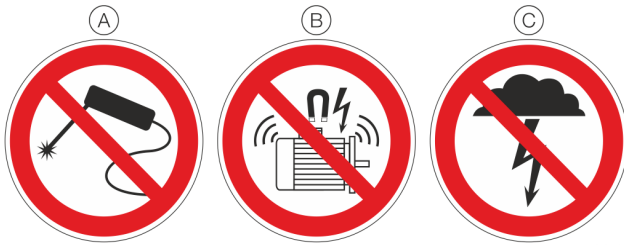

- (A) Do not weld
- (B) No high-frequency interference signals / switching operations of large consumers
- (C) No overvoltage due to lightning

Figure 14: Warning signs

Overcurrent and overvoltage can occur through for example welding operations, switching operations of large electric consumers, or lightning in the vicinity of the transmitter, sensor, as well as connector cables.

Temperature transmitters are sensitive devices on the sensor side as well. Long connector cables to the sensor can encourage damaging interference. This can already happen if temperature sensors are connected to the transmitter during installation, but are not yet integrated into the system (no connection to the supply isolator / DCS)!

Suited protective measures

The following items should be observed to protect the transmitter from sensor-side damage:

- In the vicinity of the transmitter, sensor and sensor connector cable in case of a connected sensor, high-energy overvoltage, overcurrent and high-frequency interference signals due to welding operations, lightning, circuit breakers or large consumers of electricity among others should be absolutely avoided.
- The connection cable of the sensor on the transmitter should be disconnected when performing welding work in the vicinity of the installed transmitter, sensor, as well as supply lines from the sensor to the transmitter.
- This correspondingly also applies to the supply side, if there is a connection there.

Conductor material

NOTICE

Danger of wire break!

The use of stiff cable material can lead to wire breaks in the cables.

- Only use cable material with stranded wires.

Supply voltage

Power supply cable:

Flexible standard cable material

Maximum wire cross section:

1.5 mm² (AWG 16)


Sensor connection

Depending on the type of sensor, a variety of cable materials can be used for connections.

The integrated internal reference junction makes it possible to directly connect thermal compensating cables.

Pin assignment

Resistance thermometers (RTD) / resistors (potentiometer)

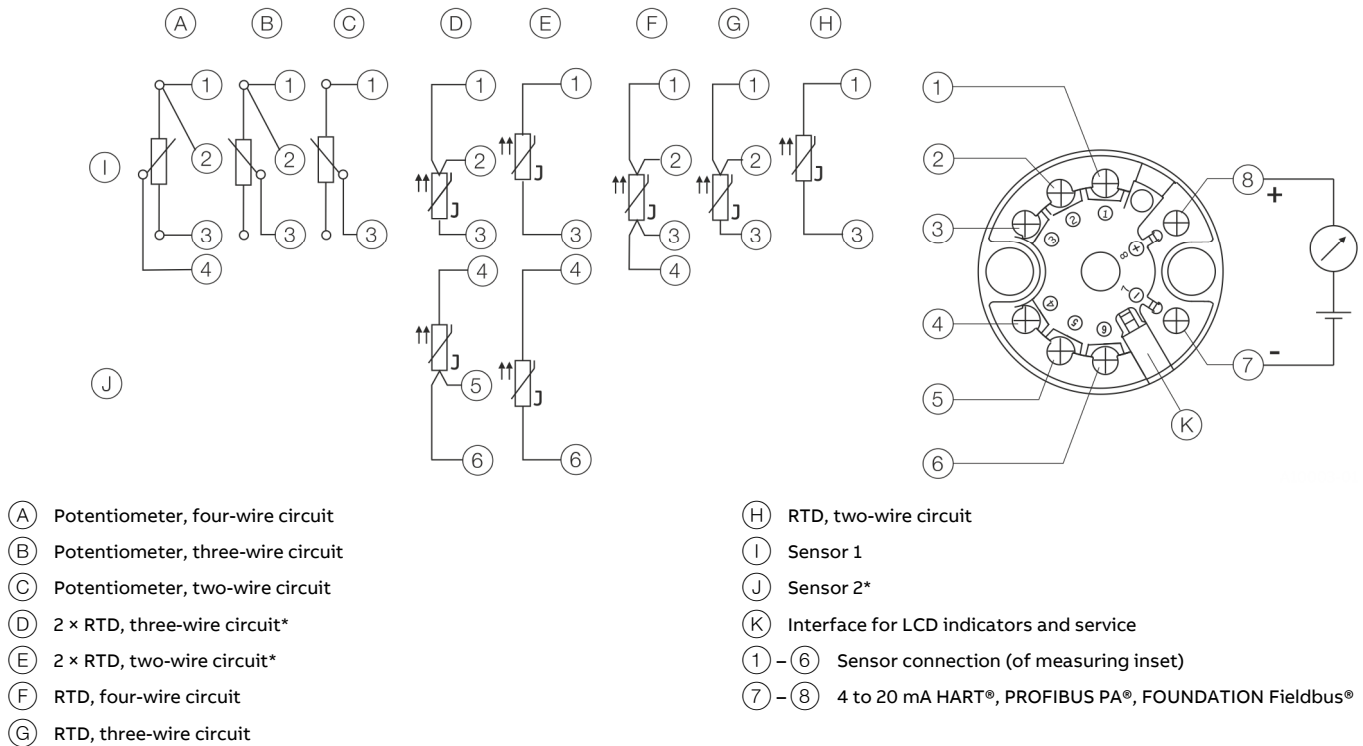

* Sensor backup / sensor redundancy, sensor drift monitoring, mean measurement, or differential measurement

Figure 15: Terminal assignment resistance thermometers (RTD) / resistors (potentiometer)

... 8 Electrical connections

... Pin assignment

Thermocouples / voltages and resistance thermometer (RTD) / thermocouple combinations

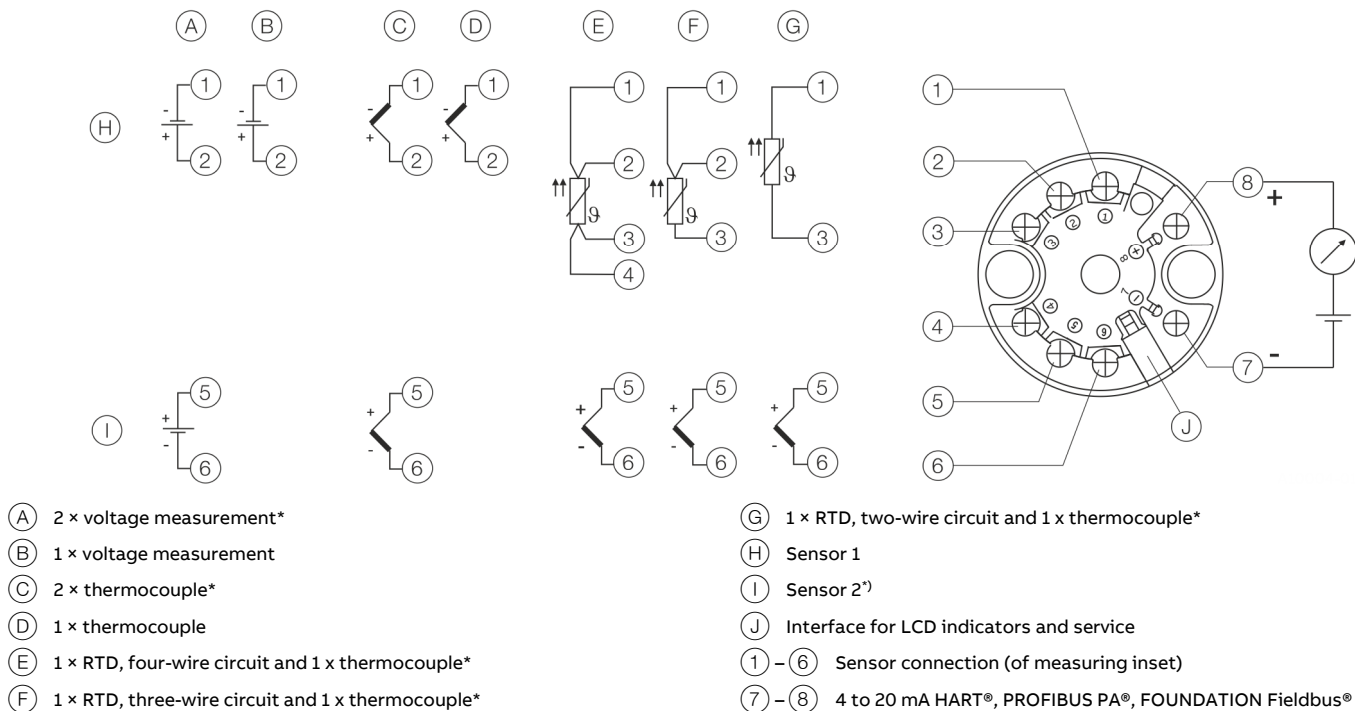


Figure 16 Terminal assignment thermocouples / voltages and resistance thermometer (RTD) / thermocouple combinations

Electrical data for inputs and outputs

Input - resistance thermometer / resistances

Resistance thermometer

- Pt100 in accordance with IEC 60751, JIS C1604, MIL-T-24388
- Ni in accordance with DIN 43760
- Cu in accordance with recommendation OIML R 84

Resistance measurement

- 0 to 500 Ω
- 0 to 5000 Ω

Sensor connection type

Two-, three-, four-wire circuit

Connection lead

- Maximum sensor line resistance
per line 50 Ω in accordance with NE 89
- Three-wire circuit:
Symmetrical sensor line resistances
- Two-wire circuit:
Compensation up to 100 Ω total lead resistance

Measurement current

< 300 μ A

Sensor short circuit

< 5 Ω (for resistance thermometer)

Sensor wire break

- Measuring range: 0 to 500 Ω > 0.6 to 10 k Ω
- Measuring range: 0 to 5 Ω > 5.3 to 10 k Ω

Detection of sensor wire break in accordance with NE 89 in all lines

Sensor error signaling

- Resistance thermometer:
Sensor short circuit and sensor wire break
- Linear resistance measurement:
Sensor wire break

Input - thermocouples / voltages

Types

- B, E, J, K, N, R, S, T in accordance with IEC 60584
- U, L in accordance with DIN 43710
- C in accordance with IEC 60584 / ASTM E988
- D in accordance with ASTM E988

Voltages

- -125 to 125 mV
- -125 to 1100 mV

Connection lead

- Maximum sensor line resistance:
per line 1.5 k Ω , total 3 k Ω

Detection of sensor wire break in accordance with NE 89 in all lines

Input resistance

> 10 M Ω

Internal reference junction Pt1000, IEC 60751 Cl. B

(no additional jumpers necessary)

Sensor error signaling

- Thermocouple:
Sensor wire break
- Linear voltage measurement:
Sensor wire break

Functionality input

Freestyle characteristic / 32-points-sampling point table

- Resistance measurement up to a maximum of 5 k Ω
- Voltages up to maximum 1.1 V

Sensor error adjustment

- Through Callendar-Van Dusen coefficients
- Through value table, 32 support points
- Through single-point adjustment (offset adjustment)
- Through two-point adjustment

Input functionality

- 1 Sensor
- 2 Sensors:
mean measurement,
differential measurement,
sensor redundancy,
Sensor drift monitoring

... 8 Electrical connections

... Electrical data for inputs and outputs

Output – HART®

Note

The HART® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

Transmission characteristics

- Temperature linear
- Resistance linear
- Voltage linear

Output signal

- Configurable 4 to 20 mA (standard)
- Configurable 20 to 4 mA
(Dynamic range: 3.8 to 20.5 mA in accordance with NE 43)

Simulation mode

3.5 to 23.6 mA

Induced current consumption

< 3,5 mA

Maximum output current

23.6 mA

Configurable error current signal

Note

Regardless of the alarm setting (underrange or overrange), a high alarm or low alarm is always generated for some internal device errors (e.g. hardware errors). More detailed information can be found in the SIL Safety Manual.

Before SW-Rev. 3.00

Note

The default factory setting for the error current signal is high alarm 22 mA.

- Overrange / high alarm 22 mA (20.0 to 23.6 mA)
- Underrange / low alarm 3.6 mA (3.5 to 4.0 mA)

From SW-Rev. 3.00

Note

The default factory setting for the error current signal is low alarm 3.5 mA, in accordance with NAMUR recommendations NE 93, NE 107 and NE 131.

- Overrange / high alarm 22 mA (20.0 to 23.6 mA)
- Underrange / low alarm 3.5 mA (3.5 to 4.0 mA)

Output – PROFIBUS PA®

Note

The PROFIBUS PA® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

Output signal

- PROFIBUS – MBP (IEC 61158-2)
- Baud rate 31.25 kBit/s
- PA-Profile 3.01
- FISCO compliant (IEC 60079-27)
- ID-Number: 0x3470 [0x9700]

Error current signal

- FDE (Fault Disconnection Electronic)

Block structure

- Physical Block
- Transducer Block 1 – Temperature
- Transducer Block 2 – HMI (LCD indicator)
- Transducer Block 3 – enhanced diagnosis
- Analog Input 1 – Primary Value (Calculated Value*)
- Analog Input 2 – SECONDARY VALUE_1 (Sensor 1)
- Analog Input 3 – SECONDARY VALUE_2 (Sensor 2)
- Analog Input 4 – SECONDARY VALUE_3 (reference junction temperature)
- Analog Output – optional HMI display (Transducer Block 2)
- Discrete Input 1 – extended diagnosis 1 (Transducer Block 3)
- Discrete Input 2 – extended diagnosis 2 (Transducer Block 3)

* Sensor 1, Sensor 2 or difference or mean

For detailed information see the PROFIBUS PA® interface description (COM/TTH300/PB).

Output – FOUNDATION Fieldbus®

Note

The FOUNDATION Fieldbus® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

Output signal

- FOUNDATION Fieldbus H1 (IEC 611582-2)
- Baud rate 31.25 kBit/s, ITK 5.x
- ITK 6.x from SW-Rev. 1.02.00 (see interface description FOUNDATION Fieldbus, COM/TTH300/FF)
- FISCO compliant (IEC 60079-27)
- Device ID: 000320001F...

Error current signal

- FDE (Fault Disconnection Electronic)

Block structure*

- Resource Block
- Transducer Block 1 – Temperature
- Transducer Block 2 – HMI (LCD indicator)
- Transducer Block 3 – enhanced diagnosis
- Analog Input 1 – PRIMARY_VALUE_1 (Sensor 1)
- Analog Input 2 – PRIMARY_VALUE_2 (Sensor 2)
- Analog Input 3 – PRIMARY_VALUE_3 (Calculated Value**)
- Analog Input 4 – SECONDARY_VALUE (reference junction temperature)
- Analog Output – optional HMI display

(Transducer Block 2)

- Discrete Input 1 – extended diagnosis 1 (Transducer Block 3)
- Discrete Input 2 – extended diagnosis 2 (Transducer Block 3)
- PID – PID controller

LAS (Link Active Scheduler) link master functionality

* For the block description, block index, execution times, and block class, refer to the interface description

** Sensor 1, Sensor 2 or difference or mean

Power supply

Two-wire technology, polarity safe; power supply lines = signal lines

Note

Following calculations apply for standard applications. This should be taken into consideration when working with a higher maximum current.

Power supply – HART®

Input terminal voltage

Non-Ex application:

$$U_S = 11 \text{ to } 42 \text{ V DC}$$

Ex applications:

$$U_S = 11 \text{ to } 30 \text{ V DC}$$

Maximum permissible residual ripple for input terminal voltage


During communication this is in accordance with the HART FSK 'Physical Layer' specification.

Undervoltage detection on the transmitter

If the terminal voltage on the transmitter down-scales a value of 10 V, this may lead to an output current of $I_a \leq 3.6 \text{ mA}$.

Maximum load

$$R_B = (\text{supply voltage} - 11 \text{ V}) / 0.022 \text{ A}$$

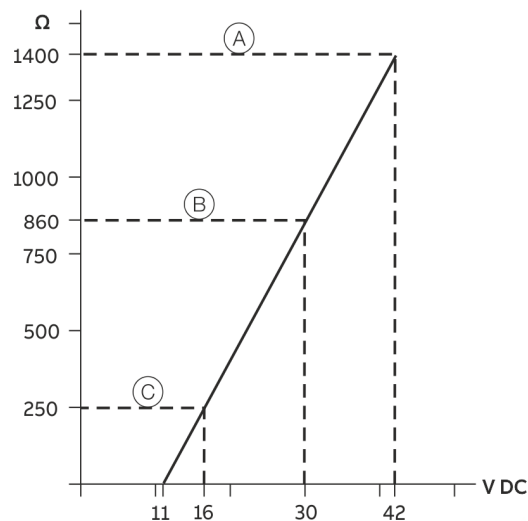

(A) TTH300

(B) TTH300 in Ex-applications

(C) HART communication resistance

Figure 17: Maximum load depending on input terminal voltage

Maximum power

$$P = U_S \times 0.022 \text{ A}$$

$$\text{E.G. } U_S = 24 \text{ V} \rightarrow P_{\max} = 0.528 \text{ W}$$

... 8 Electrical connections

... Electrical data for inputs and outputs

Voltage drop on the signal line

When connecting the devices, note the voltage drop on the signal line. The minimum supply voltage on the transmitter must not be undershot.

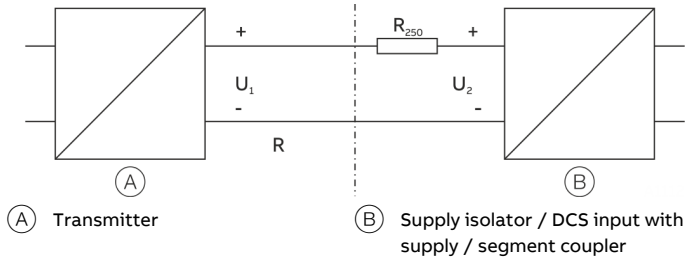


Figure 18: HART load resistance

U_{1min} : Minimum supply voltage on the transmitter

U_{2min} : Minimum supply voltage of the supply isolator / DCS input

R : Line resistance between transmitter and supply isolator

R_{250} : Resistance (250 Ω) for HART functionality

Standard application with 4 to 20 mA functionality

When connecting these components, observe the following condition:

$$U_{1min} \leq U_{2min} - 22 \text{ mA} \times R$$

Standard application with HART functionality

Adding resistance R_{250} increases the minimum supply voltage

$$U_{2min}: U_{1min} \leq U_{2min} - 22 \text{ mA} \times (R + R_{250})$$

For HART functionality, use supply isolators or DCS input cards with a HART mark. If this is not possible, a resistance of $\geq 250 \Omega$ ($< 1100 \Omega$) must be added to the interconnection.

The signal line can be operated with / without grounding. When establishing a ground connection (minus side), make sure that only one side of the terminal is connected to the equipotential bonding.

For further information on the revision of the standard HART protocol and on switching options, see **HART® Communication** on page 30 and **Hardware settings** on page 33.

Power supply – PROFIBUS / FOUNDATION Fieldbus

Input terminal voltage

Non-Ex application:

$$U_S = 9 \text{ to } 32 \text{ V DC}$$

Ex-applications with:

$$U_S = 9 \text{ to } 17 \text{ V DC (FISCO)}$$

$$U_S = 9 \text{ to } 24 \text{ V DC (Fieldbus Entity model I.S.)}$$

Current consumption:

$$\leq 12 \text{ mA}$$

Standard application with PROFIBUS PA and FOUNDATION Fieldbus H1 functionality

During hookup, the following condition should be complied with:

$$U_{1min} \leq U_{2min} - 12 \text{ mA} \times R$$

9 MID Certification

TTH300 with MID Certification

The temperature transmitter TTH300 is certified by an MID Parts Certificate in accordance with the Measuring Instruments Directive 2014/32/EU (MID) and the standard WELMEC 7.2. The device with the appropriate configuration is therefore approved for 'Custody Transfer' measurements (fiscal metering). The MID certification emphasizes the high accuracy, reliability and durability of the TTH300.

Note

This chapter provides basic information on the MID-certified transmitter TTH300. Before commissioning the device, full information should be consulted in the supplied MID documents (Parts Certificate and associated 'Description'). Any generally applicable statements on the transmitter TTH300, especially pertaining to explosion protection and device safety, remain unaffected.

General

Devices with MID certification have their own EU declaration of conformity. In addition to the declaration, the 'Parts Certificate' and the associated 'Description' are enclosed with the device. It is compulsory and imperative that the described areas of application, requirements and restrictions are complied with for the intended use of the device!

The requirements of explosion protection and functional safety (SIL) remain unaffected by the MID certification.

The number of the partial certificate (TC11002) of the notified body NMI Certin B.V. and the checksum (0x46c9) of the certified SW revision 01.03.00 are printed on the name plate of the device.

Areas of application, conditions and requirements

The temperature transmitter TTH300 with MID certification for custody transfer measurements is especially suited for measurement and control systems in the oil and gas industry. In addition to gas, any liquids except for water are permitted for measurement.

The MID certification refers to a special configuration of the transmitter. This must not be modified! An extract of the conditions and requirements stated in the certificate follows below:

- Communication protocol: HART 5, HART 7
- HW revision: 1.07
- SW revision: 01.03.00 with checksum 0x46c9
- The checksum of the software (firmware) is printed on the name plate of the device
- On sensor Pt100 in a four-wire circuit
- Permissible measuring range:
–50 to 150 °C (–58 to 302 °F)
- Ambient temperature range without LCD indicator:
–40 to 85 °C (–40 to 185 °F)


Note

- Based on the MID certificate, an operation of the TTH300 with the connected LCD indicator is not permitted.
- The MID certification can generally be combined with all certifications of explosion protection.
The ambient temperature and measuring range named in the corresponding explosion protection certificate, however, limit the ranges permitted in the MID certificate.

Installation and Operation

The following should be observed in particular during installation and operation of the device:

- Protection against overwrite:
Local write protection (DIP switch 1) should be activated after installation and configuration.
- The housing which encloses the transmitter must be closed and secured against opening using a seal.
If the transmitter is integrated in the connection head of a temperature sensor, – e.g. a SensyTemp TSP100 (TSP1x1) or TSP300 (TSP3x1) from ABB – the seal should be applied over the gap between the top and the base of the head.

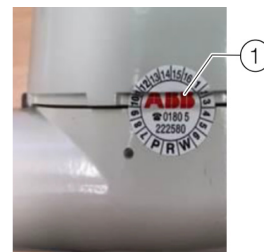

① Seal sticker

Figure 19: Seal sticker (example)

10 Commissioning

General

In case of corresponding order the transmitter is ready for operation after mounting and installation of the connections. The parameters are set at the factory.

The connected lines must be checked for firm seating. Only firmly seated lines ensure full functionality.

Hardware settings on page 33

Checks prior to commissioning

The following points must be checked before commissioning the device:

- Correct wiring in accordance with **Electrical connections** on page 21.
- The ambient conditions must correspond to the information given on the name plate and in the data sheet.

Communication

HART® Communication

Note

The HART® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

Communication with the transmitter takes place using the HART protocol. The communication signal is modulated onto both wires of the signal line in accordance with the HART FSK ‘Physical Layer’ specification.

The HART modem is connected at the signal line of the current output via which power is also supplied via the power supply unit.

The device is listed with the FieldComm Group.

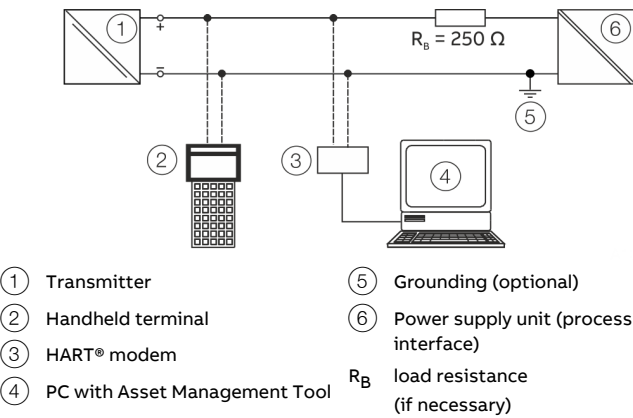


Figure 20: Example for HART® connection

| | |
|---------------------|--|
| Manufacturer ID | 0x1A |
| Device ID | HART 5: 0x000B, HART 7: 0x1A0B |
| Profile | From SW-Rev. 3.00 (corresponds to HW-Rev. 2.00 and higher): HART 5.9 and HART 7.6, switchable via <ul style="list-style-type: none">• HMI LCD indicator with configuration function• Tools• HART commands Default, if nothing else ordered: HART 7.6. SW-Rev. 1.03: HART 5.1 and HART 7, switchable via DIP switch. Default, if nothing else ordered: HART 5.1. SW-Rev. 1.01.08: HART 5.1, previously HART 5. |
| Configuration | On device using LCD indicator DTM, EDD, FDI (FIM) |
| Transmission signal | BELL Standard 202 |

Operating modes

- Point-to-point communication mode – standard (general address 0)
- HART 5: Multidrop mode (addressing 1 to 15)
- HART 7: Addressing 0 to 63, independent of current loop mode
- Burst Mode

Configuration options / tools

Driver-independent:

- HMI LCD indicator with configuration function

Driver-dependent:

- Device management / Asset management tools
- FDT technology – via TTX300-DTM driver (Asset Vision Basic / DAT200)
- EDD – via TTX300 EDD driver (Handheld terminal, Field Information Manager / FIM)
- FDI technology – via TTX300 package (Field Information Manager / FIM)

Diagnosis notice

- Overrange- / underrange in accordance with NE 43
- HART® diagnosis

Extended from SW-Rev. 3.00

- Device status signaling according to NE 107
- Freely configurable diagnostic categorization with diagnostic history according to NE 107

Tracking of events and configuration changes, from SW-Rev. 3.00

The HART® device stores information on critical events and configuration changes.

The information can be output via tools:

- Event monitor for logging critical events
- Configuration monitor for configuration changes

See the interface description HART® (COM/TTX300/HART) for details.

PROFIBUS® Communication

Note

The PROFIBUS PA® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

The interface conforms to Profile 3.01

(standard PROFIBUS®, EN 50170, DIN 1924 [PRO91]).

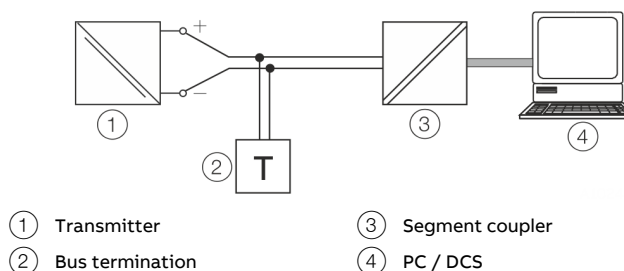


Figure 21: Example for PROFIBUS PA® connection

| | |
|---------------------|---|
| Manufacturer ID | 0x1A |
| ID number | 0x3470 [0x9700] |
| Profile | PA 3.01 (see interface description PROFIBUS PA® (COM/TTX300/PB)) |
| Configuration | On device using LCD indicator DTM EDD GSD |
| Transmission signal | IEC 61158-2 |

Voltage / current consumption

- Mean current consumption: 12 mA.
In the event of an error, the FDE function (= Fault Disconnection Electronic) integrated in the device makes sure that the current consumption cannot exceed a maximum of 20 mA.

... 10Commissioning

... Communication

FOUNDATION Fieldbus® Communication

Note

The FOUNDATION Fieldbus® protocol is an unsecured protocol, as such the intended application should be assessed to ensure that these protocols are suitable before implementation.

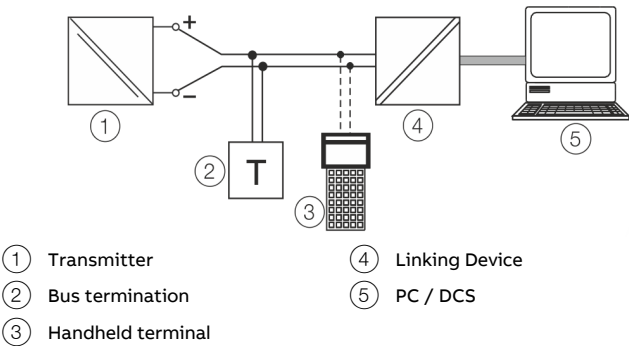


Figure 22: Example for FOUNDATION Fieldbus® connection

| | |
|--------------------------|--|
| Device ID | 000320001F... |
| ITK | 5.x |
| ITC from SW-Rev. 1.02.00 | 6.x (see FOUNDATION Fieldbus® interface description (COM/TTX300/FF)) |
| Configuration | On device using LCD indicator EDD |
| Transmission signal | IEC 61158-2 |

Voltage / current consumption

- Mean current consumption: 12 mA.
In the event of an error, the FDE function (= Fault Disconnection Electronic) integrated in the device makes sure that the current consumption cannot exceed a maximum of 20 mA.

Basic Setup

Note

The communication and configuration of the transmitter via HART, PROFIBUS PA and FOUNDATION Fieldbus H1 are described in the separate documentation “Interface Description” for the relevant protocol (COM/TTX300/...).

The following configuration types are available for the transmitter:

- With DTM:
Configuration can be performed within an FDT frame application that is approved for use with the DTM.
- With EDD:
Configuration can be performed within an EDD frame application that is approved for use with the EDD.
- With FDI-Package (FIM):
Configuration is possible within an FDI frame applications (Field Information Manager / FIM) for which the FDI packages are released.
- With LCD indicator Type A with operating buttons
Commissioning via the LCD indicator does not require any tools to be connected to the device and is therefore the simplest way of configuring the TTH300.
The general operation and menus of the LCD indicator are described in **Menu navigation** on page 34.

Note

Unlike configuration using the DTM, EDD or FDI-Package (FIM) the functionality of the transmitter can only be changed to a limited extent with the LCD indicator.

11 Operation

Safety instructions

If there is a chance that safe operation is no longer possible, take the device out of operation and secure it against unintended startup.

Hardware settings

Devices with HART® from HW-Rev. 2.00 (corresponds to SW-Rev. 3.00 and higher)

HART devices from HW-Rev. 2.00 do not have DIP switches. The desired HART profile (HART 7 or HART 5) and the write protection is set via the operating buttons of the LCD display (optional), tools or HART commands.

Note

Factory setting, unless explicitly ordered otherwise:

- HART 7
- Write protection OFF

Devices with PROFIBUS PA®, FOUNDATION Fieldbus® and HART® to HW-Rev. 1.07

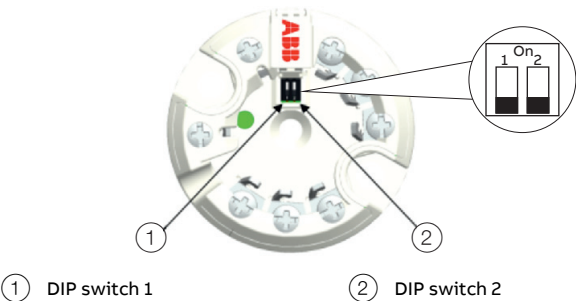


Figure 23: DIP switch on the transmitter (not for HART devices from HW-Rev. 2.00)

The transmitter has two DIP switches that can be accessed via a hinged cover.

- Switch 1 activates the hardware write protection.
- Switch 2 supports the FOUNDATION Fieldbus requirement for a hardware enable for simulation in accordance with ITK.

For transmitters that support HART 7, switch 2 allows the desired HART version to be set (HART 5 or HART 7).

| DIP switch | Function |
|------------|---|
| ① | Local write protection Off: Local write protection deactivated On: Local write protection activated |
| ② | Enabling the simulation (only with FOUNDATION Fieldbus) Off: Simulation blocked On: Simulation enabled |
| | Selecting the HART version (only with HART protocol) Off: HART 5 On: HART 7 |

Note (not for HART devices from HW-Rev. 2.00)

- Factory settings: Both switches ‘OFF’. Local write protection deactivated and HART 5, unless explicitly ordered HART 7 (HART version) or simulation locked (FOUNDATION Fieldbus).
- With PROFIBUS PA devices, Switch 2 must always be in the ‘OFF’ position.

... 11 Operation

Menu navigation

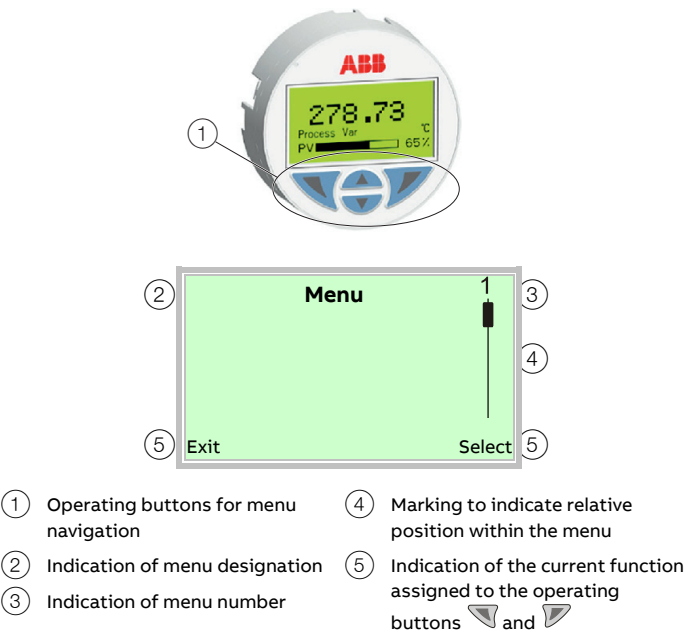








Figure 24: LCD indicator (example)

You can use the  or  operating buttons to browse through the menu or select a number or character within a parameter value.

Different functions can be assigned to the  and  operating buttons. The function ⑤ that is currently assigned to them is shown on the LCD display.


Control button functions

|  | Meaning |
|--|---|
| Exit | Exit menu |
| Back | Go back one submenu |
| Cancel | Cancel a parameter entry |
| Next | Select the next position for entering numerical and alphanumeric values |


|  | Meaning |
|--|----------------------------|
| Select | Select submenu / parameter |
| Edit | Edit parameter |
| OK | Save parameter entered |

HART® menu levels

To SW-Rev. 1.03

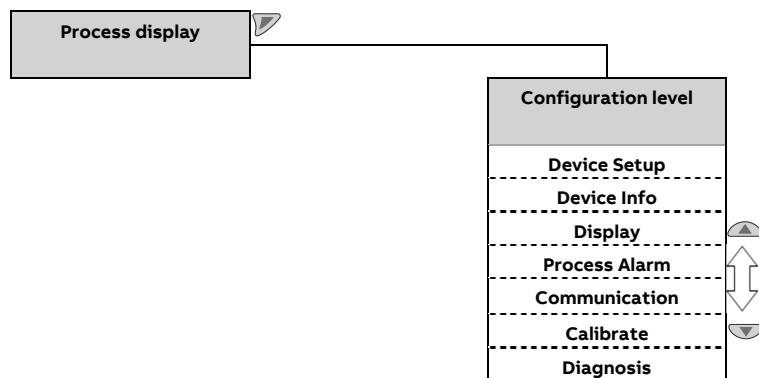

From SW-Rev. 3.00

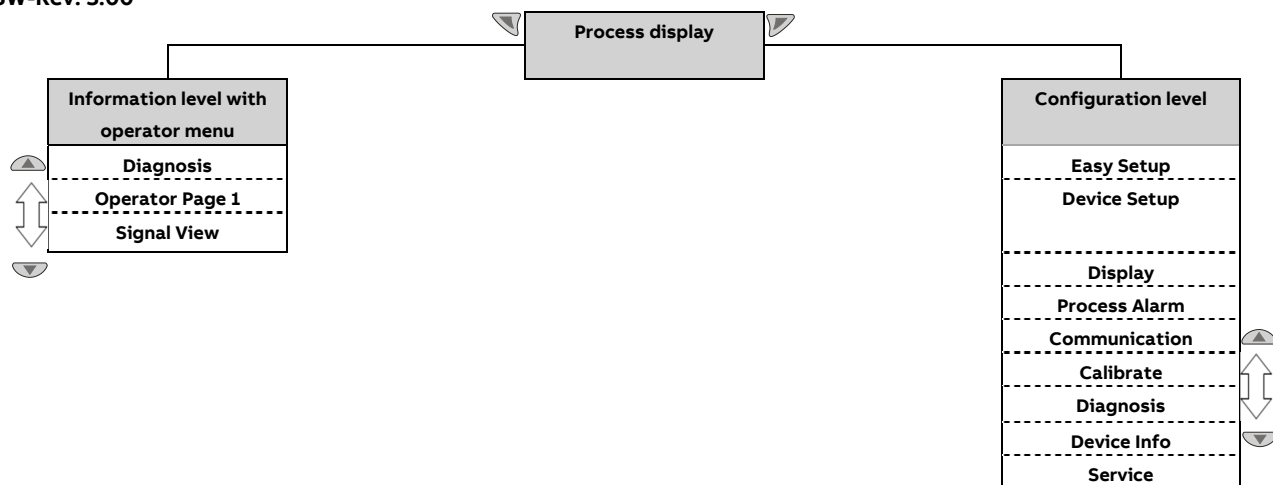**Process display**

The process display shows the current process values.

Operator menu

On the information level, the operator menu can be used to display diagnostic information and choose which operator pages to display.

Configuration level

The configuration level contains all the parameters required for device commissioning and configuration. The device configuration can be changed on this level.


Easy Setup

The menu item “Easy Setup” from SW-Rev. 3.00 permits simplified configuration of the device.

... 11 Operation

... Menu navigation

PROFIBUS PA® and FOUNDATION Fieldbus® H1 menu levels

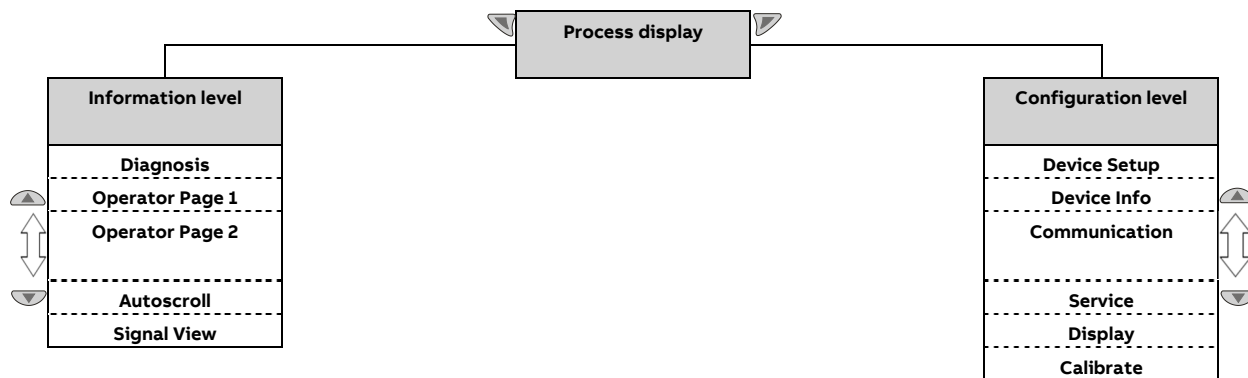

Process display

The process display shows the current process values.

Information level

The information level contains the parameters and information that are relevant for the operator.

The device configuration cannot be changed on this level.

Configuration level

The configuration level contains all the parameters required for device commissioning and configuration. The device configuration can be changed on this level.

Process display

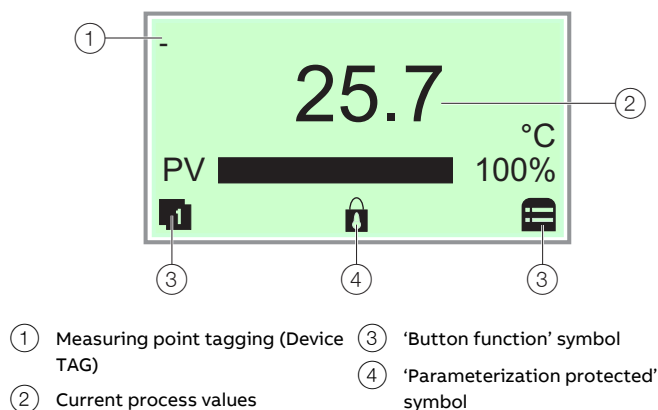







Figure 25: Process display (example)

The process display appears on the LCD display when the device is powered on. It shows information about the device and current process values.

The way in which the current process values are shown can be adjusted on the configuration level.

The symbols at the bottom of the process display are used to indicate the functions of the operating buttons  and , in addition to other information.


From SW-Rev. 3.00, two process variables can also be optionally displayed: one is displayed on top of the other.

| Symbol | Description |
|--|---|
|  | Call up information level. |
|  | Call up configuration level. |
|  | The device is protected against changes in the parametrization. |


Error messages in the HART® LCD display

In the event of an error, different information appears depending on the revision:

- To SW-Rev. 1.03: A symbol or letter (Device Status) and a number (DIAG.NO.)
- As of SW-Rev. 3.00: Corresponding device status symbol and associated diagnostics group.

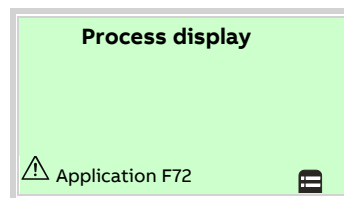



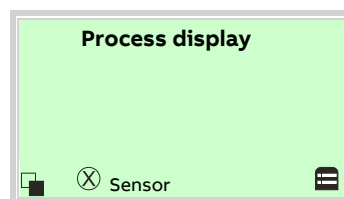

To SW-Rev. 1.03



From SW-Rev. 3.00

The diagnostic messages are divided into the following groups in accordance with the NAMUR classification scheme:

| Symbol letter* | Status symbols according to NAMUR NE 107** | Description | |
|----------------|---|----------------------|---|
| I | not applicable | OK or Information | Device is functioning or information is available |
| C |  | Check Function | Device is undergoing maintenance (for example simulation) |
| S |  | Off Specification | Device or measuring point is being operated outside of the specifications |
| M |  | Maintenance Required | Request service to prevent the measuring point from failing |
| F |  | Failure | Error; measuring point has failed |

* To SW-Rev. 1.03

** From SW-Rev. 3.00

... 11 Operation

... Process display

The error can then be read in plain text via the information level “Diagnosis” (from SW-Rev. 3.00).

Additionally, the diagnostic messages are divided into the following areas:


| Range | Description |
|--------------------------------|--|
| Electronics | Diagnosis for device hardware. |
| Sensor | Diagnosis for sensor elements and connection lines. |
| Configuration | Diagnosis of the communication interface and parameterization / configuration. |
| Operating conditions | Diagnosis for ambient and process conditions. |
| Process (from SW-Rev. 3.00) | Notes and warnings when leaving the sensor or process temperature range. |

Note

For a detailed description of the errors and notices on troubleshooting, see **Diagnosis / error messages** on page 67.

Error messages in the LCD display PROFIBUS PA® and FOUNDATION Fieldbus®

In the event of an error, a message consisting of a symbol and text appears at the bottom of the process screen (e. g. electronics) The text displayed provides information about the area in which the error has occurred.

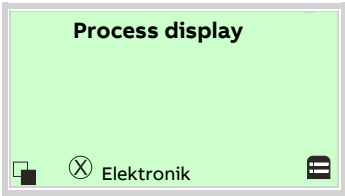

The error messages are divided into four groups in accordance with the NAMUR classification scheme. The group assignment can only be changed using a DTM or EDD:

| Symbol | Description |
|--------|------------------------------|
| | Error / failure |
| | Function check |
| | Outside of the specification |
| | Maintenance required |

The error can then be read in plain-text format on the ‘Diagnosis’ information level.

The error messages are also divided into the following areas:


| Range | Description |
|------------------------------|--|
| Electronics | Diagnosis for device hardware. |
| Sensor | Diagnosis for sensor elements and connection lines. |
| Installation / Configuration | Diagnosis for communication interface and parameterization / configuration |
| Operating conditions | Diagnosis for ambient and process conditions. |


Note


For a detailed description of the errors and notices on troubleshooting, see **Diagnosis / error messages** on page 67.




Switching to the information level

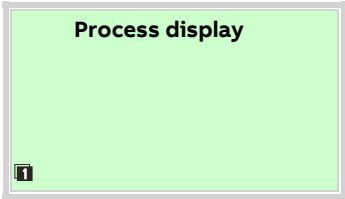(only for PROFIBUS PA, FOUNDATION Fieldbus and HART from SW-Rev. 3.00)
On the information level, the operator menu can be used to display diagnostic information and choose which operator pages to display.

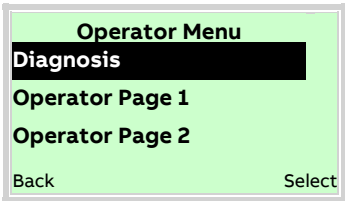

1. Open the  using Operator Menu.




2. Select the desired submenu using  / .
3. Confirm the selection with .


| Menu | Description |
|---------------------|---|
| ... / Operator Menu | |
| Diagnosis | Selection of the “Diagnosis” submenu, see also Error messages in the HART® LCD display on page 37 und Error messages in the LCD display PROFIBUS PA® and FOUNDATION Fieldbus® on page 38. |
| Operator Page 1 | Selection of operator page to be displayed. |
| Operator Page 2* | |
| Autoscroll* | When ‘Multiplex mode’ is activated, automatic switching of the operator pages is initiated on the process screen. |
| Signal View | Selects the ‘Signal View’ submenu, in which all dynamic measured values are displayed. |

* Only for PROFIBUS PA® and FOUNDATION Fieldbus®




Switching to the configuration level (parameterization)

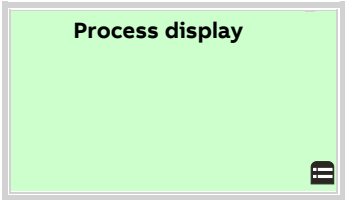The device parameters can be displayed and changed on the configuration level.



1. Switch to the configuration level using .

The LCD display now indicates the first menu item on the configuration level.


2. Select a menu using  / .
3. Confirm the selection with .

... 11 Operation


Selecting and changing parameters

Entry from table

When an entry is made from a table, a value is selected from a list of parameter values.

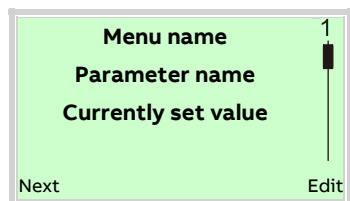

1. Select the parameters you want to set in the menu.
2. Use to call up the list of available parameter values. The parameter value that is currently set is highlighted.

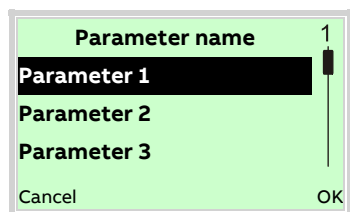


3. Select the desired value using / .
4. Confirm the selection with .


This concludes the procedure for selecting a parameter value.

Numerical entry

When a numerical entry is made, a value is set by entering the individual decimal positions.

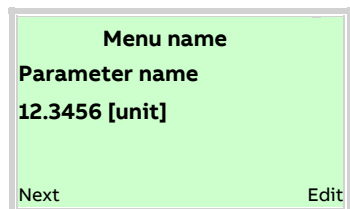


1. Select the parameters you want to set in the menu.
2. Use to call up the parameter for editing. The decimal place that is currently selected is highlighted.

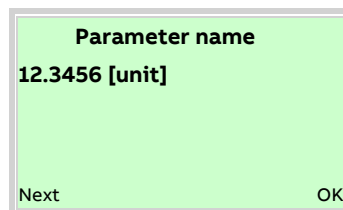


3. Use to select the decimal place to change.
 4. Use / to set the desired value.
 5. Use to select the next decimal place.
 6. If necessary select and set additional decimal places in accordance with steps 3 to 4.
 7. Use to confirm your setting.
- This concludes the procedure for changing a parameter value.

Alphanumeric entry

When an alphanumeric entry is made, a value is set by entering the individual decimal positions.

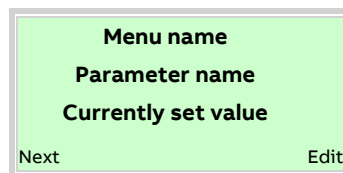

1. Select the parameters you want to set in the menu.
2. Use to call up the parameter for editing. The decimal place that is currently selected is highlighted.

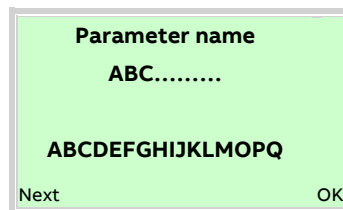

3. Use to select the decimal place to change.
 4. Use / to set the desired value.
 5. Use to select the next decimal place.
 6. If necessary select and set additional decimal places in accordance with steps 3 to 4.
 7. Use to confirm your setting.
- This concludes the procedure for changing a parameter value.


Parameter overview HART® (for devices to SW-Rev. 1.03)

Note

This overview of parameters shows all the menus and parameters available on the device. Depending on the version and configuration of the device, not all of the menus and parameters may be visible in it.


Devices to SW-Rev. 1.03 and from SW-Rev. 3.00 have partly different menus and parameters. The options for process variable representation are increased from SW-Rev. 3.00. Additional device and diagnostic information is provided. The setting and canceling of write protection has changed.

In addition, for devices from SW-Rev. 3.00, additional information (event and configuration monitor, see interface description HART, COM/TTH300/HART) and detailed diagnostics can be displayed and configured in tools / drivers such as FIM and DTM.

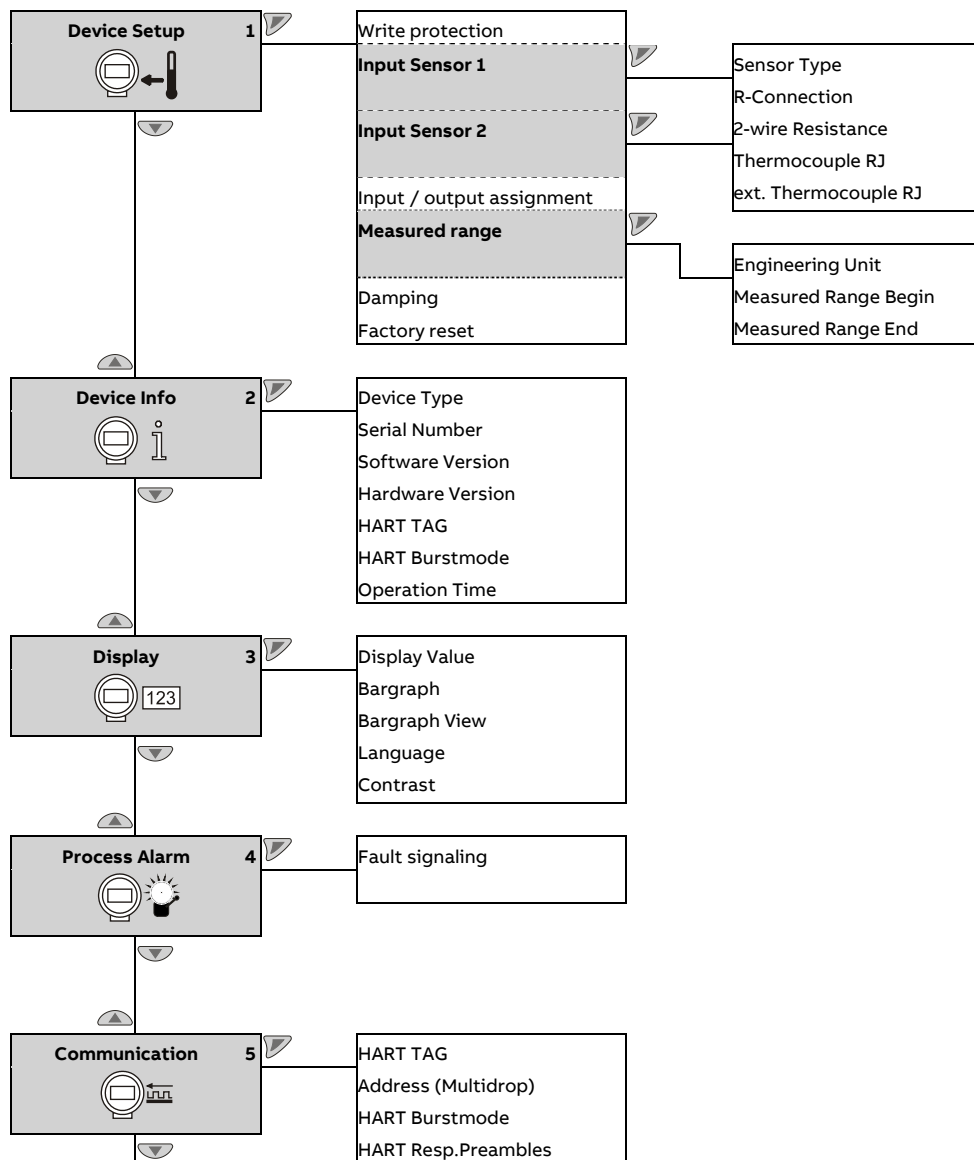

... 11 Operation

... Parameter overview HART® (for devices to SW-Rev. 1.03)

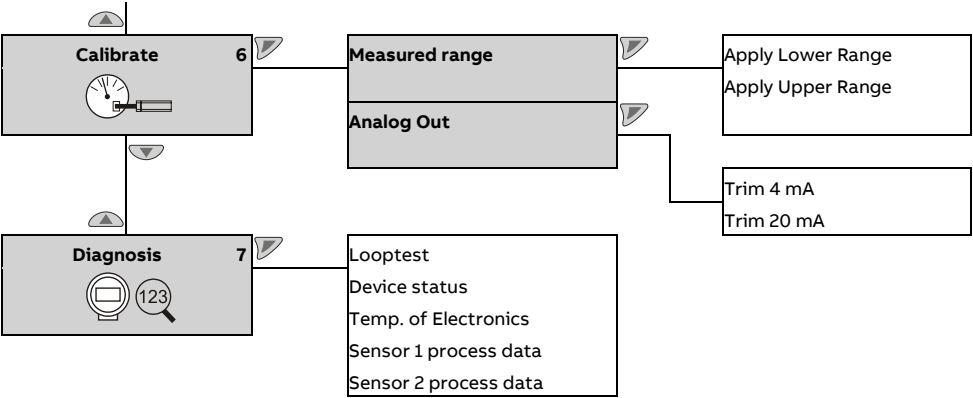

Parameter description HART® (for HART®-devices to SW-Rev. 1.03)

Menu: Device Setup

| Menu / parameter | Description |
|--|---|
| ... / Device Setup | |
| Write protection | Activates write protection for the entire device <ul style="list-style-type: none"> • Yes: locked Entry combination: ≠ 0110 • No: unlocked Entry combination: 0110 |
| Input Sensor 1 | Select the 'Input Sensor 1' submenu. |
| Input Sensor 2 | Select the 'Input Sensor 2' submenu. |
| Input / output assignment | Selects the inputs that are mapped to the current output <ul style="list-style-type: none"> • Sensor 1 • Sensor 2 • Difference (S1-S2) • Difference (S2-S1) • Meanvalue • Electr. Meas. S1 • Electr. Meas. S2 • Redundancy • Temp. Electronics |
| Measured range | Select the 'Measured range' submenu. |
| Damping | Configurable τ 63% output signal damping value Value range: 0 to 100 s |
| Factory reset | Resets configuration data, adjustment data trim high / low and DAC adjustment values to factory settings. <ul style="list-style-type: none"> • Yes / OK |
| ... / Device Setup / Input Sensor 1 | |
| ... / Device Setup / Input Sensor 2 | |
| Sensor Type | Selects sensor type: <ul style="list-style-type: none"> • Pt100 (IEC751): Resistance thermometer Pt100 (IEC751) • Pt1000 (IEC751): Resistance thermometer Pt1000 (IEC751) • TC type K (IEC584): Thermocouple type K (IEC584) • TC type B (IEC584): Thermocouple type B (IEC584) • TC type C (ASTME988): Thermocouple type C (IEC584) • TC type D (ASTME988): Thermocouple type D (ASTME988) • TC type E (IEC584): Thermocouple type E (IEC584) • TC type J (IEC584): Thermocouple type J (IEC584) • TC type N (IEC584): Thermocouple type N (IEC584) • TC type R (IEC584): Thermocouple type R (IEC584) • TC type S (IEC584): Thermocouple type S (IEC584) • TC type T (IEC584): Thermocouple type T (IEC584) • TC type L (DIN43710): Thermocouple type L (DIN43710) • TC type U (DIN43710): Thermocouple type U (DIN43710) |

... 11 Operation

... Parameter description HART® (for HART®-devices to SW-Rev. 1.03)

| Menu / parameter | Description |
|-------------------------------------|--|
| ... / Device Setup / Input Sensor 1 | |
| ... / Device Setup / Input Sensor 2 | |
| Sensor Type | <p>Selection of the sensor type (continued):</p> <ul style="list-style-type: none"> • -125 ... 125 mV: Linear voltage measurement -125 to 125 mV • -125 ... 1100 mV: Linear voltage measurement -125 to 1100 mV • 0 ... 500 Ω: Linear resistance measurement 0 to 500 Ω • 0 ... 5000 Ω: Linear resistance measurement 0 to 5000 Ω • Pt10 (IEC751): Resistance thermometer Pt10 (IEC751) • Pt50 (IEC751): Resistance thermometer Pt50 (IEC751) • Pt200 (IEC751): Resistance thermometer Pt200 (IEC751) • Pt500 (IEC751): Resistance thermometer Pt500 (IEC751) • Pt10 (JIS1604): Resistance thermometer Pt10 (JIS1604) • Pt50 (JIS1604): Resistance thermometer Pt50 (JIS1604) • Pt100 (JIS1604): Resistance thermometer Pt100 (JIS1604) • Pt200 (JIS1604): Resistance thermometer Pt200 (JIS1604) • Pt10 (MIL24388): Resistance thermometer Pt10 (MIL24388) • Pt50 (MIL24388): Resistance thermometer Pt50 (MIL24388) • Pt100 (MIL24388): Resistance thermometer Pt100 (MIL24388) • Pt200 (MIL24388): Resistance thermometer Pt200 (MIL24388) • Pt1000 (MIL24388): Resistance thermometer Pt1000 (MIL24388) • Ni50 (DIN43760): Resistance thermometer Ni50 (DIN43716) • Ni100 (DIN43760): Resistance thermometer Ni100 (DIN43716) • Ni120 (DIN43760): Resistance thermometer Ni120 (DIN43716) • Ni1000 (DIN43760): Resistance thermometer Ni1000 (DIN43716) • Cu10 a=4270: Resistance thermometer Cu10 a=4270 • Cu100 a=4270: Resistance thermometer Cu100 a=4270 • Fixpoint Table 1: Customer-specific characteristic curve 1 • Fixpoint Table 2: Customer-specific characteristic curve 2 • Fixpoint Table 3: Customer-specific characteristic curve 3 • Fixpoint Table 4: Customer-specific characteristic curve 4 • Fixpoint Table 5: Customer-specific characteristic curve 5 • Cal. Van Dusen 1: Callendar Van Dusen coefficient set 1 • Cal. Van Dusen 2: Callendar Van Dusen coefficient set 2 • Cal. Van Dusen 3: Callendar Van Dusen coefficient set 3 • Cal. Van Dusen 4: Callendar Van Dusen coefficient set 4 • Cal. Van Dusen 5: Callendar Van Dusen coefficient set 5 • off: Sensor channel deactivated (sensor 2 only) |

| Menu / parameter | Description |
|--|---|
| R-Connection | <p>Sensor connection type relevant for all Pt, Ni, Cu resistance thermometers</p> <ul style="list-style-type: none"> • two-wire: Sensor connection type in two-wire technology • three-wire: Sensor connection type in three-wire technology • four-wire: Sensor connection type in four-wire technology |
| 2-wire Resistance | <p>Sensor line resistance relevant for all Pt, Ni, Cu resistance thermometers with a two-wire circuit</p> <p>Value range: 0 to 100 Ω</p> |
| Thermocouple RJ | <ul style="list-style-type: none"> • Internal: Use of internal reference junction of the transmitter when using thermal compensating cable. • External - fixed: Use of external fixed reference junction of the transmitter when constant thermostat temperature is used (can be set with ext. Thermocouple RJ). • Without: no Thermocouple RJ • Sensor 1: Use of sensor 1 as reference junction for sensor 2 |
| ext. Thermocouple RJ | <p>— Relevant for external reference junction, specification of constant external reference junction temperature</p> <p>Value range: -50 to 100 $^{\circ}\text{C}$</p> |
| ... / Device Setup / Measured range | |
| Engineering Unit | <p>Selects the physical unit for the sensor measuring signal</p> <p>Units: $^{\circ}\text{C}$, $^{\circ}\text{F}$, $^{\circ}\text{R}$, K, user, mV, Ω, mA</p> |
| Measured Range Begin | Defines the value for 4 mA (adjustable) |
| Measured Range End | Defines the value for 20 mA (adjustable) |

... 11 Operation

... Parameter description HART® (for HART®-devices to SW-Rev. 1.03)

Menu: Device Info

| Menu / parameter | Description |
|-------------------|-----------------------------------|
| ... / Device Info | |
| Device Type | Displays device type. |
| Serial Number | Displays device serial number. |
| Software Version | Displays device software version. |
| Hardware Version | Displays device hardware version. |
| HART TAG | Displays the HART Tag. |
| HART Burstmode | Displays the HART Descriptor. |
| Operation Time | Displays device operating hours. |

Menu: Display

| Menu / parameter | Description |
|------------------|--|
| ... / Display | |
| Display Value | Selects the process variable shown in the process display <ul style="list-style-type: none"> • Process Variable: Calculated process variable (PV) • Sensor 1: Measured value from Sensor 1 • Sensor 2: Measured value from Sensor 2 • Electr. Meas. S1: Measured value from Sensor 1 (in Ω or mV) • Electr. Meas. S2: Measured value from Sensor 2 (in Ω or mV) • Temp. Electronics: Temperature of the transmitter • Output Current: Output current of 4 to 20 mA signal • Output %: Output value as % of measuring range |
| Bargraph | Selects whether or not a Bargraph is shown |
| Bargraph View | <ul style="list-style-type: none"> • Output Current: Output current of the 4 to 20 mA signal • Output %: Output value as % of measuring range |
| Language | Selects the menu language <ul style="list-style-type: none"> • German • English |
| Contrast | Sets the display contrast Value range: 0 to 100 % |

Menu: Process Alarm

| Menu / parameter | Description |
|----------------------------|--|
| ... / Process Alarm | |
| Fault signaling | <ul style="list-style-type: none"> Underrange: in the event of an error, the current, for example 3.6 mA, is output Overrange: in the event of an error, the current, for example 22 mA, is output |

Menu: Communication

| Menu / parameter | Description |
|----------------------------|--|
| ... / Communication | |
| HART TAG | Measuring point tagging <ul style="list-style-type: none"> 8 characters |
| Address (Multidrop) | Address range in multidrop mode Value range: 0 to 15 (0 means no multidrop mode) |
| HART Burstmode | <ul style="list-style-type: none"> Status (on / off): Switches burst operating mode on or off Command # (1, 2, 3, 33): sets the HART command to be sent cyclically |
| HART Resp.Preambles | Number of preambles to be used for sending Value range: 5 to 20 |

Menu: Calibrate

| Menu / parameter | Description |
|---|--|
| ... / Calibrate | |
| Measured range | Select the 'Measured range' submenu. |
| Analog Out | Select the 'Analog Out' submenu. |
| ... / Calibrate / Measured range | |
| Apply Lower Range | The current reading (PV) is used as the lower range limit (4 mA). |
| Apply Upper Range | The current reading (PV) is used as the upper range limit (20 mA). |
| ... / Calibrate / Analog Out | |
| Trim 4 mA | Adjusts the current output with a 4 mA setpoint Value range: 3.500 to 4.500 mA |
| Trim 20 mA | Adjusts the current output with a 20 mA setpoint Value range: 19.500 to 20.500 mA |






... 11 Operation

... Parameter description HART® (for HART®-devices to SW-Rev. 1.03)

Menu: Diagnosis

| Menu / parameter | Description |
|-----------------------|--|
| ... / Diagnosis | |
| Loop test | Simulates the current output signal Value range: 0 to 23.600 mA |
| Device status | Diagnosis notice (maintenance required, error, etc.) |
| Temp. of Electronics | Drag indicator: maximum or minimum device temperature |
| Sensor 1 process data | Drag indicator: maximum or minimum sensor temperature for sensor 1 Reset: Resets the values |
| Sensor 2 process data | Drag indicator: maximum or minimum sensor temperature for sensor 2 Reset: Resets the values |


Activating write protection

1. Confirm 'Device Setup' with  and select the sub item 'Write protection'. Displays the current write protection setting.
2. Use the  'Edit' button to edit the current write protection configuration.
3. Use the  or  buttons to select at least one alphanumeric character (up to 4 may be selected) and confirm via the  button.

Note

Spaces and the number combination 0110 must not be entered.

4. Write protection 'YES' is displayed.

Click the  button 3 times to exit configuration mode and display 'Reading Display Mode'.

Deactivating write protection

Access the write protection edit mode according to the example. In write protection edit mode, an alphanumeric string of characters is displayed.

1. Enter the entry combination '0110'.
 2. Confirm with the 'OK' button.
- 'Write protection NO' is displayed.

Note

Entry combination '0110', used to deactivate write protection, cannot be changed.


Parameter overview HART® (for HART-devices from SW-Rev. 3.00)

Note

This overview of parameters shows all the menus and parameters available on the device. Depending on the version and configuration of the device, not all of the menus and parameters may be visible in it.


Devices to SW-Rev. 1.03 and from SW-Rev. 3.00 have partly different menus and parameters. The options for process variable representation are increased from SW-Rev. 3.00. Additional device and diagnostic information is provided. The setting and canceling of write protection has changed.


In addition, for devices from SW-Rev. 3.00, additional information (event and configuration monitor, see interface description HART, COM/TTH300/HART) and detailed diagnostics can be displayed and configured in tools / drivers such as FIM and DTM.

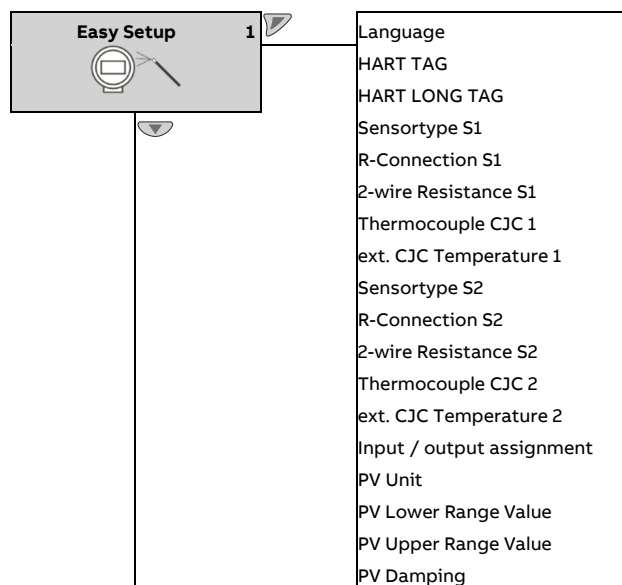

... 11 Operation

... Parameter overview HART® (for HART-devices from SW-Rev. 3.00)

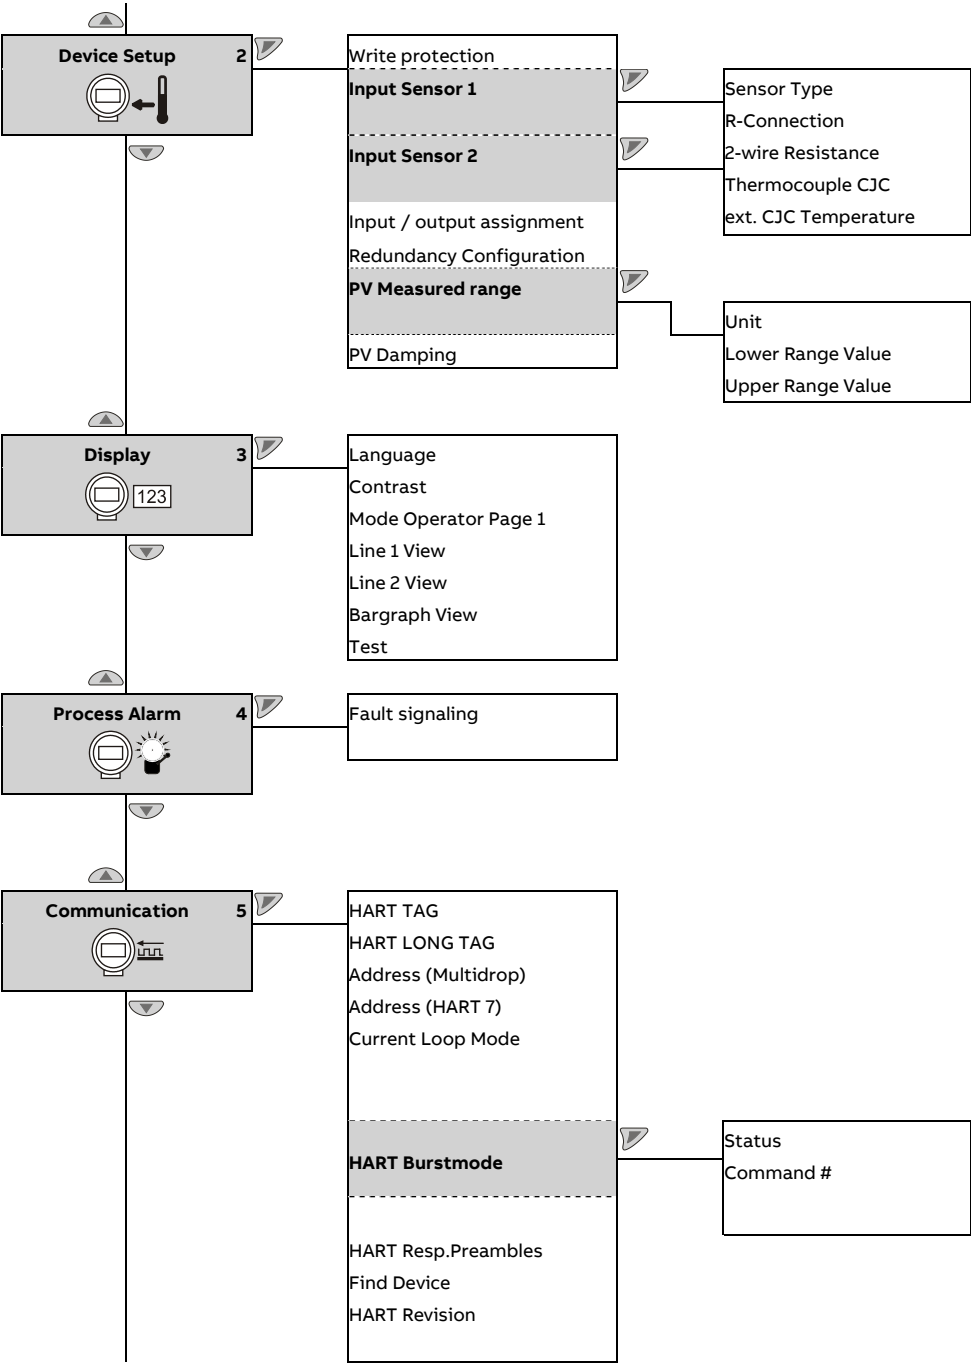

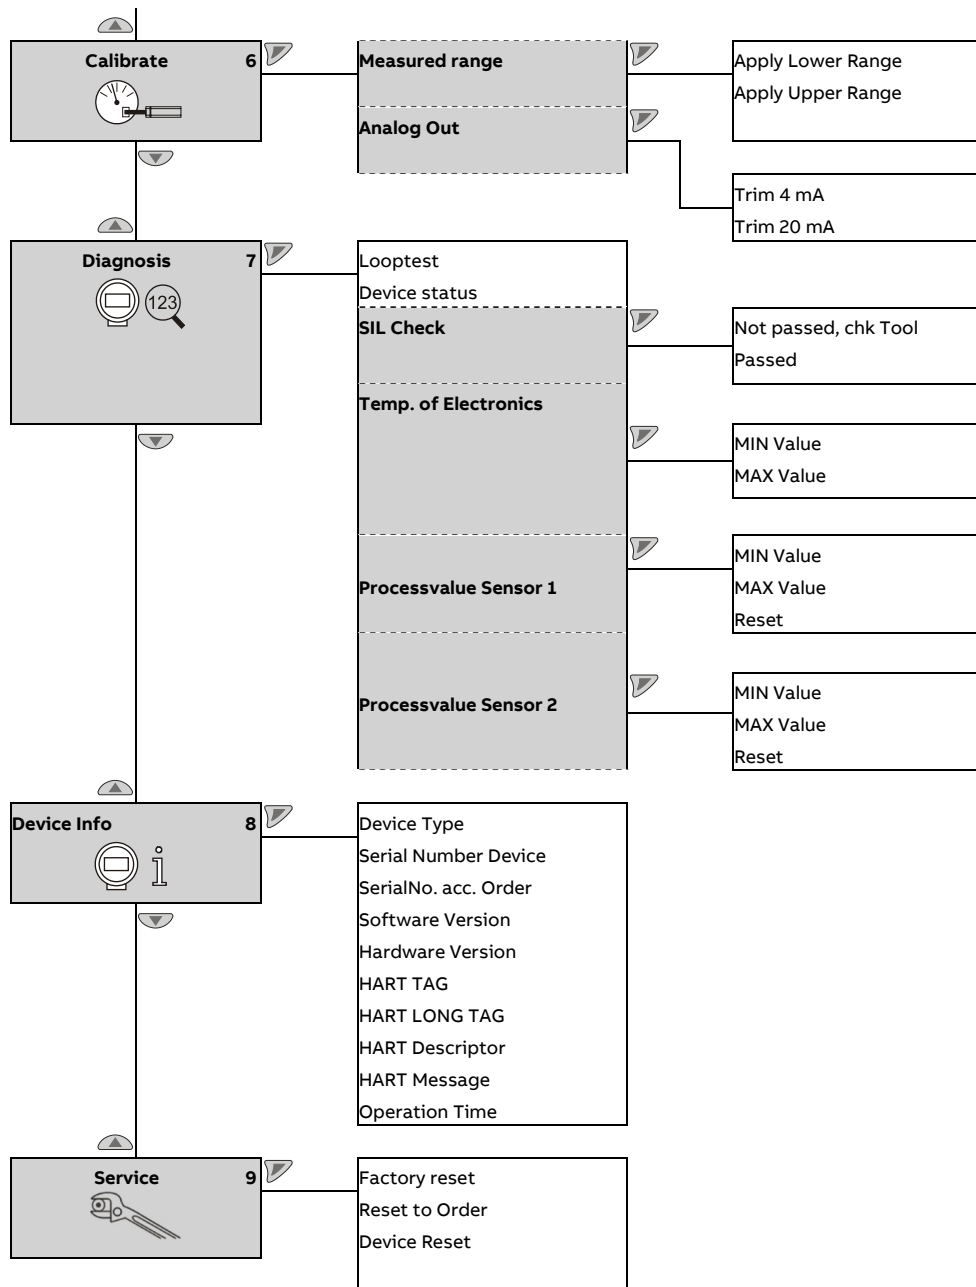

... 11 Operation

Parameter description HART® (for HART®-devices from SW-Rev. 3.00)

Menu: Easy Setup

| Menu / parameter | Description |
|-------------------------------|--|
| ... / Easy Setup | |
| Language | Selection of the menu language. <ul style="list-style-type: none"> German English |
| HART TAG | Measuring point tagging <ul style="list-style-type: none"> 8 characters |
| LONG TAG | Long tag: Unique label of the device in the plant (HART 7) <ul style="list-style-type: none"> 32 characters |
| Sensortype S1 (Sensortype S2) | Selects sensor type: <ul style="list-style-type: none"> 0 to 500 Ω: Linear resistance measurement 0 to 500 Ω 0 to 5000 Ω: Linear resistance measurement 0 to 5000 Ω Cal. Van Dusen 1: Callendar-Van Dusen coefficient set 1 Pt50 (IEC751): Resistance thermometer Pt50 (IEC751) Pt100 (IEC751): Resistance thermometer Pt100 (IEC751) Pt200 (IEC751): Resistance thermometer Pt200 (IEC751) Pt500 (IEC751): Resistance thermometer Pt500 (IEC751) Pt1000 (IEC751): Resistance thermometer Pt1000 (IEC751) Pt50 (JIS1604): Resistance thermometer Pt50 (JIS1604) Pt100 (JIS1604): Resistance thermometer Pt100 (JIS1604) Pt50 (IMIL24388): Resistance thermometer Pt50 (MIL24388) Pt100 (MIL24388): Resistance thermometer Pt100 (MIL24388) Pt200 (MIL24388): Resistance thermometer Pt200 (MIL24388) Pt1000 (MIL24388): Resistance thermometer Pt1000 (MIL24388) Ni50 (DIN43760): Resistance thermometer Ni50 (DIN43716) Ni100 (DIN43760): Resistance thermometer Ni100 (DIN43716) Ni120 (DIN43760): Resistance thermometer Ni120 (DIN43716) Ni1000 (DIN43760): Resistance thermometer Ni1000 (DIN43716) Cu10 a=4260: Resistance thermometer Cu10 a=4260 Cu100 a=4260: Resistance thermometer Cu100 a=4260 Pt10 (IEC751): Resistance thermometer Pt10 (IEC751) Pt10 (JIS1604): Resistance thermometer Pt10 (JIS1604) Pt10 (IMIL24388): Resistance thermometer Pt10 (MIL24388) |

| Menu / parameter | Description |
|------------------------|--|
| ... / Easy Setup | <p>Selection of the sensor type (continued):</p> <ul style="list-style-type: none"> • -125 to 125 mV: Linear voltage measurement -125 to 125 mV • -125 to 1100 mV: Linear voltage measurement -125 to 1100 mV • TC type B (IEC584): Thermocouple type B (IEC584) • TC type C (ASTME988): Thermocouple type C (IEC584) • TC type D (ASTME988): Thermocouple type D (ASTME988) • TC type E (IEC584): Thermocouple type E (IEC584) • TC type J (IEC584): Thermocouple type J (IEC584) • TC type K (IEC584): Thermocouple type K (IEC584) • TC type N (IEC584): Thermocouple type N (IEC584) • TC type R (IEC584): Thermocouple type R (IEC584) • TC type S (IEC584): Thermocouple type S (IEC584) • TC type T (IEC584): Thermocouple type T (IEC584) • TC type L (DIN43710): Thermocouple type L (DIN43710) • TC type U (DIN43710): Thermocouple type U (DIN43710) • Cal. Van Dusen 2: Callendar Van Dusen coefficient set 2 • Cal. Van Dusen 3: Callendar Van Dusen coefficient set 3 • Cal. Van Dusen 4: Callendar Van Dusen coefficient set 4 • Cal. Van Dusen 5: Callendar Van Dusen coefficient set 5 • Fixpoint table 1: Customer-specific characteristic curve 1 • Fixpoint table 2: Customer-specific characteristic curve 2 • Fixpoint table 3: Customer-specific characteristic curve 3 • Fixpoint table 4: Customer-specific characteristic curve 4 • Fixpoint table 5: Customer-specific characteristic curve 5 • off: Sensor channel deactivated (sensor 2 only) |
| R-Connection S1 | <p>Sensor connection type relevant for all Pt, Ni, Cu resistance thermometers</p> <ul style="list-style-type: none"> • Two-wire: sensor connection type in two-wire technology • Three-wire: sensor connection type in three-wire technology • Four-wire: sensor connection type in four-wire technology |
| 2-wire Resistance S1 | <p>Sensor line resistance relevant for all Pt, Ni, Cu resistance thermometers with a two-wire circuit</p> <p>Value range: 0 to 100 Ω</p> |
| Thermocouple CJC 1 | <p>Cold junction compensation for thermocouples</p> <ul style="list-style-type: none"> • Internal: Use of internal cold junction temperature of the transmitter when using thermal compensating cable. • External – fixed: Use of external fixed cold junction temperature of the transmitter when constant thermostat temperature is used (can be set with external cold junction temperature 1). • None: no thermocouple cold junction compensation (CJC) |
| ext. CJC Temperature 1 | <p>Relevant for external cold junction compensation, specification of constant external cold junction temperature</p> <p>Value range: -50 to 100 °C</p> |
| Sensortype S2 | <p>Selects sensor type:</p> <p>see table of sensortypes ... / Easy Setup / sensortype S1</p> |

... 11 Operation

... Parameter description HART® (for HART®-devices from SW-Rev. 3.00)

| Menu / parameter | Description |
|-------------------------|--|
| ... / Easy Setup | |
| R-Connection S2 | <p>Sensor connection type relevant for all Pt, Ni, Cu resistance thermometers</p> <ul style="list-style-type: none"> Two-wire: sensor connection type in two-wire technology Three-wire: sensor connection type in three-wire technology Four-wire: sensor connection type in four-wire technology |
| 2-wire Resistance S2 | <p>Sensor line resistance relevant for all Pt, Ni, Cu resistance thermometers with a two-wire circuit</p> <p>Value range: 0 to 100 Ω</p> |
| Thermocouple CJC 2 | <p>Cold junction compensation for thermocouples</p> <ul style="list-style-type: none"> Internal: Use of internal cold junction temperature of the transmitter when using thermal compensating cable. External – fixed: Use of external fixed cold junction temperature of the transmitter when constant thermostat temperature is used (can be set with external cold junction temperature 2) None: no thermocouple cold junction compensation (CJC) Sensor 1 temperature: Use of sensor 1 as cold junction temperature for sensor 2 |
| ext. CJC Temperature 2 | <p>Relevant for external cold junction compensation, specification of constant external cold junction temperature</p> <p>Value range: -50 to 100 $^{\circ}\text{C}$</p> |
| In-output Assignment | <p>Input / output assignment selects the inputs that are mapped to the current output</p> <ul style="list-style-type: none"> Sensor 1 Electr. meas. S1 Temp. electronics Difference (S2-S1) Mean value Sensor 2 Electr. meas. S2 Redundancy Difference (S1-S2) |
| PV Unit | <p>Selects the physical unit for the sensor measuring signal</p> <p>Units: $^{\circ}\text{C}$, $^{\circ}\text{F}$, $^{\circ}\text{R}$, K, mV, Ω, V, kΩ</p> |
| PV Lower Range Value | Defines the value for 4 mA (adjustable) |
| PV Upper Range Value | Defines the value for 20 mA (adjustable) |
| PV Damping | <p>Configurable τ 63% output signal damping value</p> <p>Value range: 0 to 100 s</p> |

Menu: Device Setup

| Menu / parameter | Description |
|---|---|
| ... / Device Setup | |
| Write protection | Activates write protection for the entire device <ul style="list-style-type: none"> On: locked Off: unlocked |
| Input Sensor 1 | Select the 'Input Sensor 1' submenu. |
| Input Sensor 2 | Select the 'Input Sensor 2' submenu. |
| Input / output assignment | Input / output assignment Selects the inputs that are mapped to the current. see table of input / output assignment ... / Easy Setup / In-output assignment |
| Redundancy Configuration | Configures the type of redundancy <ul style="list-style-type: none"> Availability: If one of two sensors fail, the measurement with the valid measurement of the good sensor continues. The diagnostics informs about the defective sensor. Safety: If one of two sensors fail, current output signals alarm current. Also diagnostics informs about the defective sensor. |
| PV Measured range | Select the 'PV Measured range' submenu. |
| PV Damping | Configurable τ 63% output signal damping value Value range: 0 to 100 s |
| ... / Device Setup / Input Sensor 1 | |
| ... / Device Setup / Input Sensor 2 | |
| Sensor Type | Selects sensor type: see table of sensortypes ... / Easy Setup / sensortype S1 |
| R-Connection | Sensor connection type relevant for all Pt, Ni, Cu resistance thermometers <ul style="list-style-type: none"> two-wire: Sensor connection type in two-wire technology three-wire: Sensor connection type in three-wire technology four-wire: Sensor connection type in four-wire technology |
| 2-wire Resistance | Sensor line resistance relevant for all Pt, Ni, Cu resistance thermometers with a two-wire circuit Value range: 0 to 100 Ω |
| Thermocouple CJC | Cold junction compensation for thermocouples: <ul style="list-style-type: none"> Internal: Use of internal cold junction temperature of the transmitter when using thermal compensating cable. External - fixed: Use of external fixed cold junction temperature of the transmitter when constant thermostat temperature is used (can be set with external cold junction temperature 2). None: no thermocouple cold junction compensation (CJC) Sensor 1 temperature: Use of sensor 1 as cold junction temperature for sensor 2 |
| ext. CJC Temperature | Relevant for external cold junction compensation, specification of constant external cold junction temperature Value range: -50 to 100 $^{\circ}\text{C}$ |
| ... / Device Setup / PV Measured range | |
| PV Unit | Selects the physical unit for the sensor measuring signal Units: $^{\circ}\text{C}$, $^{\circ}\text{F}$, $^{\circ}\text{R}$, K, mV, Ω , V, k Ω |
| Lower Range Value | Defines the value for 4 mA (adjustable) |
| Upper Range Value | Defines the value for 20 mA (adjustable) |

... 11 Operation

... Parameter description HART® (for HART®-devices from SW-Rev. 3.00)

Menu: Display

| Menu / parameter | Description |
|----------------------|---|
| ... / Display | |
| Language | Language selects the menu language. <ul style="list-style-type: none"> German English |
| Contrast | Sets the display contrast Value range: 0 to 100 % |
| Mode Operator Page 1 | Selects the mode for the operator page (main view) of the display One line: Show line 1: one measurement value (default PV = process variable) One line + Bargraph: Show line 1 and Bargraph Two lines: Show line 2 with additional measurement value (example sensor 2) Two Lines + Bargraph: Show 2 lines and Bargraph |
| Line 1 View | Selects the process value shown in Bargraph view of process display <ul style="list-style-type: none"> Process Variable: Calculated process variable (PV) Sensor 1: Measured value of sensor 1 Sensor 2: Measured value of sensor 2 Difference (S1-S2): Calculate difference sensor 1 – sensor 2 Difference (S2-S1): Calculate difference sensor 2 – sensor 1 Average S1 S2 : Calculate average of sensor 1 and sensor 2 Redundancy S1 S2: Redundancy of sensor 1 and sensor 2 Electr. meas. S1: Measured value from sensor 1 (in Ω or mV) Electr. meas. S2: Measured value from sensor 2 (in Ω or mV) Electronics temp.: Temperature of the transmitter Output current: Output current of 4 to 20 mA signal Output %: Output value as % of the measuring range |
| Line 2 View | Selects the process value shown in line 2 of process display (only 2 lines) see table of process variables ... / display / line 1 view |
| Bargraph View | Selects the process value shown in Bargraph view of process display see table of process variables ... / Display / Line 1 View |
| Test | Display test - Show different pattern and letter sets |

Menu: Process Alarm

| Menu / parameter | Description |
|----------------------------|--|
| ... / Process Alarm | |
| Reaction on errors | <ul style="list-style-type: none"> Low alarm: in the event of an error, the current, for example 3.5 mA, is output High alarm: in the event of an error, the current, for example 22 mA, is output |

Menu: Communication

| Menu / parameter | Description |
|---|---|
| ... / Communication | |
| HART TAG | Measuring point tagging <ul style="list-style-type: none"> 8 characters |
| LONG TAG | Long tag: Unique label of the device in the plant (from HART 7) <ul style="list-style-type: none"> 32 characters |
| Address (Multidrop) | Address range in multidrop mode (HART 5) Value range: 0 to 15 (0 means no multidrop mode) |
| Address (HART 7) | Address range (HART 7) Value range: 0 to 63 (independent of Current Loop Mode) Information HART 5: <ul style="list-style-type: none"> Address = 0 (Current Loop Mode enabled – Multidrop disabled) Address = 1 to 15 (Current Loop Mode disabled – Multidrop enabled) |
| Current Loop Mode | Only HART 7: <ul style="list-style-type: none"> Independent of the address Enabled = normal operation (output current depends on process variable (PV)) Disabled = Constant output current (like Multidrop HART 5 address >0) |
| HART Burstmode | Select the HART Burstmode submenu |
| HART Resp.Preambles | Number of preambles to be used for sending Value range: 5 to 20 |
| Find Device | This option helps with finding a device The HART master sends HART command #73 to search for the device. Device answers with HART initialize Command #0 (long address) - if found Options: <ul style="list-style-type: none"> Disabled: no reaction HART command #0 One Time: Once time reaction HART command #0 Continuous: Always reaction on HART Command #0 (long address) |
| HART Revision | Switch the device from HART 5 to HART 7 or from HART 7 to HART 5. After the change of HART Revision, a device restart is recommended. Caution: Different driver for tools for HART 5 and HART 7 required. |
| ... / Communication / HART Burstmode | |
| Status | <ul style="list-style-type: none"> Off: HART burst mode off On: HART burst operating mode on |
| Command # | Sets the HART command to be sent cyclically <ul style="list-style-type: none"> 1 Primary Var.: Primary Variable PV 2 Current+%Range: Current Output and %Range 3 Current+Dyn.Vars: Current output and dynamic variables PV, SV, QV, TV 9 Dev. Variables (H7): Device variables – only HART 7 33 Dev. Variables (H5): Device variables – only HART 5 48 Add. Dev. Status: Additional device status |

... 11 Operation

... Parameter description HART® (for HART®-devices from SW-Rev. 3.00)

Menu: Calibrate

| Menu / parameter | Description |
|---|--|
| ... / Calibrate | |
| Measured range | Select the 'Measured range' submenu. |
| Analog Out | Select the 'Analog Out' submenu. |
| ... / Calibrate / Measured range | |
| Apply Lower Range | The current reading (PV) is used as the lower range limit (4 mA). |
| Apply Upper Range | The current reading (PV) is used as the upper range limit (20 mA). |
| ... / Calibrate / Analog Out | |
| Trim 4 mA | Adjusts the current output with a 4 mA setpoint Value range: 3.500 to 4.500 mA |
| Trim 20 mA | Adjusts the current output with a 20 mA setpoint Value range: 19.500 to 20.500 mA |

Menu: Diagnosis

| Menu / parameter | Description |
|------------------------------|---|
| ... / Diagnosis | |
| Looptest | Simulates the current output signal Value range: 3.500 to 23.600 mA 0.000 mA: ends looptest |
| Device status | Diagnostic notice (maintenance required, failure, etc.) |
| SIL Check | Select the 'SIL Check' submenu. Not passed: Use tool for a detailed check of the current device configuration. Passed: SIL Configuration Check successful. The device configuration is valid for SIL Safety applications. |
| Temp. of Electronics | Select the 'Temp. of Electronics' submenu. Drag indicator: maximum or minimum device temperature |
| Processvalue Sensor 1 | Select the 'Sensor 1 process data' submenu. Drag indicator: maximum or minimum sensor temperature for sensor 1 Reset: Resets the values |
| Processvalue Sensor 2 | Select the 'Sensor 2 process data' submenu. Drag indicator: maximum or minimum sensor temperature for sensor 2 Reset: Resets the values |




Menu: Device Info

| Menu / parameter | Description |
|--------------------------|--|
| ... / Device Info | |
| Device Type | Displays device type. |
| Serial Number Device | 7 or 8-digit serial number of the device electronic unit. |
| SerialNo. acc. Order | Serial number of the device (serial number in accordance with order) |
| Software Version | Displays device software version. |
| Hardware Version | Displays device hardware version. |
| HART TAG | Displays the HART Tag. |
| HART LONG TAG | Display the HART long tag. |
| HART Descriptor | Displays the HART Descriptor. |
| HART Message | Display the HART message. |
| Operation Time | Displays device the operation time. |

Menu: Service

| Menu / parameter | Description |
|----------------------|--|
| ... / Service | |
| Factory reset | Device restarts with factory settings applied. |
| Reset to Order | Device restarts with settings according to the customer order. |
| Device Reset | Device restarts without configuration changes. |

Enable or disable write protection


1. Confirm 'Device Setup' with  and select the sub item 'Write protection'. Displays the current write protection setting.
2. Use the  "Edit" key to edit the current write protection configuration (on/off) and confirm with the  key.
3. The now current write protection configuration is displayed.

... 11 Operation

PROFIBUS PA® und FOUNDATION Fieldbus® Parameter overview

Note

This overview of parameters shows all the menus and parameters available on the device. Depending on the version and configuration of the device, not all of the menus and parameters may be visible in it.

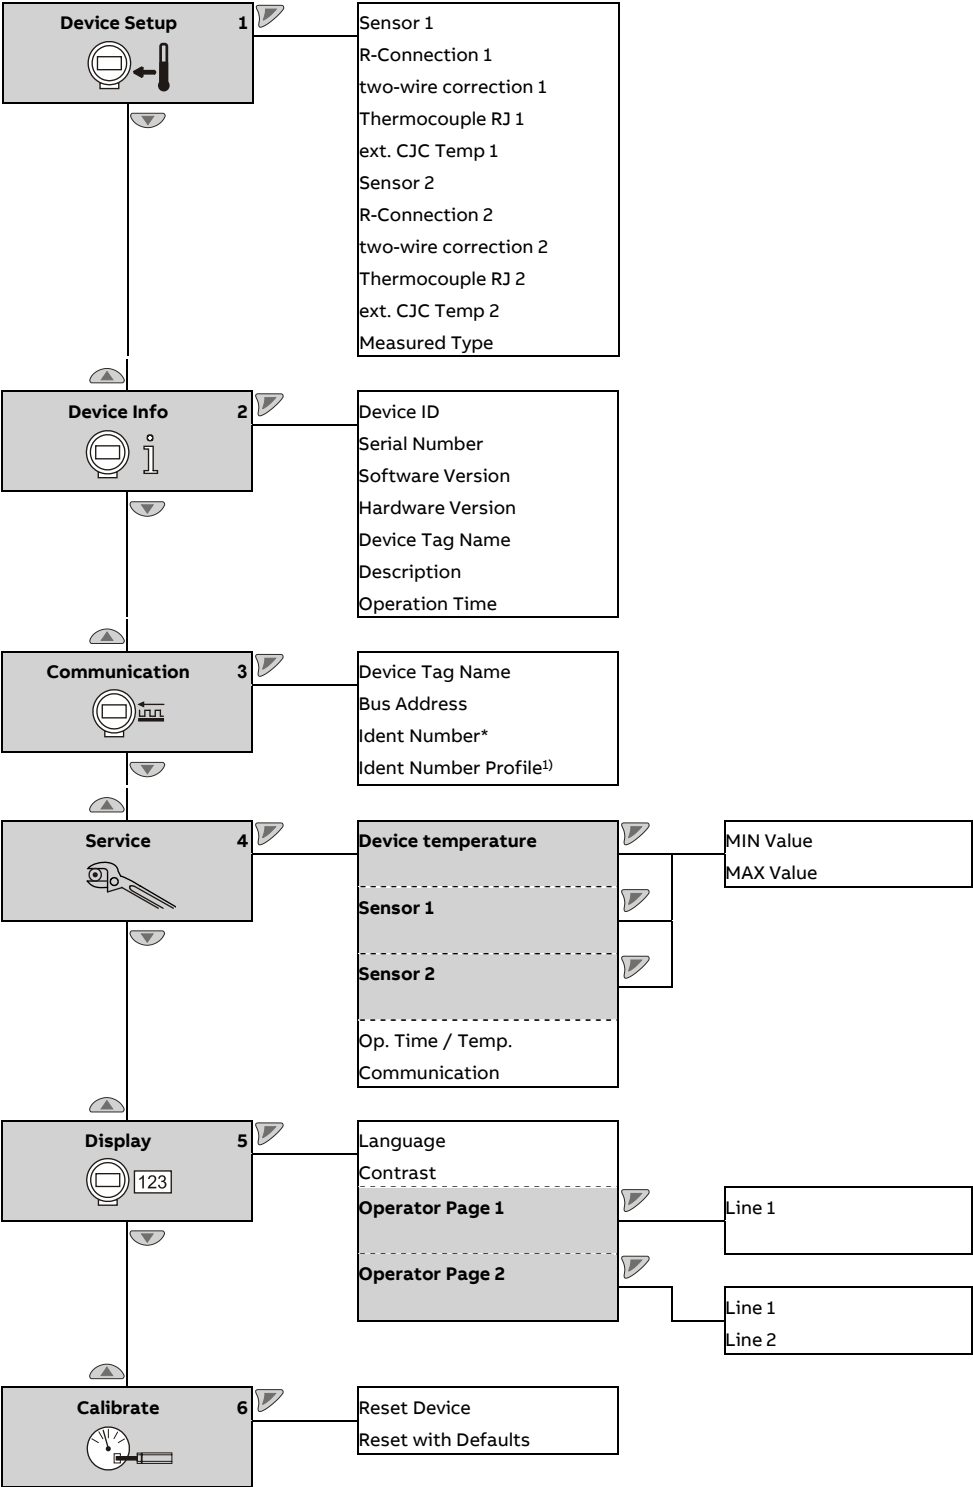

* PROFIBUS PA only

Parameter description PROFIBUS PA® and FOUNDATION Fieldbus®

Menu: Device Setup

| Menu / parameter | Description |
|---------------------|---|
| ... / Device Setup | |
| Sensor 1 / Sensor 2 | <p>Selects sensor type:</p> <ul style="list-style-type: none"> • Pt100 (IEC751): Resistance thermometer Pt100 (IEC751) • Pt1000 (IEC751): Resistance thermometer Pt1000 (IEC751) • TC type K (IEC584): Thermocouple type K (IEC584) • TC type B (IEC584): Thermocouple type B (IEC584) • TC type C (ASTME988): Thermocouple type C (IEC584) • TC type D (ASTME988): Thermocouple type D (ASTME988) • TC type E (IEC584): Thermocouple type E (IEC584) • TC type J (IEC584): Thermocouple type J (IEC584) • TC type N (IEC584): Thermocouple type N (IEC584) • TC type R (IEC584): Thermocouple type R (IEC584) • TC type S (IEC584): Thermocouple type S (IEC584) • TC type T (IEC584): Thermocouple type T (IEC584) • TC type L (DIN43710): Thermocouple type L (DIN43710) • TC type U (DIN43710): Thermocouple type U (DIN43710) • -125 ... 125 mV: Linear voltage measurement -125 to 125 mV • -125 ... 1100 mV: Linear voltage measurement -125 to 1100 mV • 0 ... 500 Ω: Linear resistance measurement 0 to 500 Ω • 0 ... 5000 Ω: Linear resistance measurement 0 to 5000 Ω • Pt10 (IEC751): Resistance thermometer Pt10 (IEC751) • Pt50 (IEC751): Resistance thermometer Pt50 (IEC751) • Pt200 (IEC751): Resistance thermometer Pt200 (IEC751) • Pt500 (IEC751): Resistance thermometer Pt500 (IEC751) • Pt10 (JIS1604): Resistance thermometer Pt10 (JIS1604) • Pt50 (JIS1604): Resistance thermometer Pt50 (JIS1604) • Pt100 (JIS1604): Resistance thermometer Pt100 (JIS1604) • Pt200 (JIS1604): Resistance thermometer Pt200 (JIS1604) • Pt10 (IMIL24388): Resistance thermometer Pt10 (MIL24388) • Pt50 (IMIL24388): Resistance thermometer Pt50 (MIL24388) • Pt100 (MIL24388): Resistance thermometer Pt100 (MIL24388) • Pt200 (MIL24388): Resistance thermometer Pt200 (MIL24388) • Pt1000 (MIL24388): Resistance thermometer Pt1000 (MIL24388) |

... 11 Operation

... Parameter description PROFIBUS PA® and FOUNDATION Fieldbus®

| Menu / parameter | Description (continuation) |
|--|---|
| Sensor 1 / Sensor 2 | Selection of the sensor type (continued): <ul style="list-style-type: none"> Ni50 (DIN43760): Resistance thermometer Ni50 (DIN43716) Ni100 (DIN43760): Resistance thermometer Ni100 (DIN43716) Ni120 (DIN43760): Resistance thermometer Ni120 (DIN43716) Ni1000 (DIN43760): Resistance thermometer Ni1000 (DIN43716) Cu10 a=4270: Resistance thermometer Cu10 a=4270 Cu100 a=4270: Resistance thermometer Cu100 a=4270 Fixpoint Table 1: Customer-specific characteristic curve 1 Fixpoint Table 2: Customer-specific characteristic curve 2 Fixpoint Table 3: Customer-specific characteristic curve 3 Fixpoint Table 4: Customer-specific characteristic curve 4 Fixpoint Table 5: Customer-specific characteristic curve 5 Cal. Van Dusen 1: Callendar-Van Dusen coefficient set 1 Cal. Van Dusen 2: Callendar-Van Dusen coefficient set 2 Cal. Van Dusen 3: Callendar-Van Dusen coefficient set 3* Cal. Van Dusen 4: Callendar-Van Dusen coefficient set 4* Cal. Van Dusen 5: Callendar-Van Dusen coefficient set 5* off: Sensor channel deactivated (sensor 2 only) |
| * only for communication protocol PROFIBUS PA | |
| ... / Device Setup | |
| R-Connection 1 / R-Connection 2 | Sensor connection type relevant for all Pt, Ni, Cu resistance thermometers <ul style="list-style-type: none"> two-wire: Sensor connection type in two-wire technology three-wire: Sensor connection type in three-wire technology four-wire: Sensor connection type in four-wire technology |
| two-wire correction 1 / two-wire correction 2 | Resistance correction of the connection lead for the connection type two-wire Value range: 0 to 100 Ω |
| Thermocouple RJ 1 / Thermocouple RJ 2 | <ul style="list-style-type: none"> Internal: Use of internal reference junction of the transmitter when using thermal compensating cable. External - fixed: Use of external fixed reference junction of the transmitter when constant thermostat temperature is used (can be set with ext. Thermocouple RJ). Without: no Thermocouple RJ Sensor 1: Use of Sensor 1 as reference junction for Sensor 2 |
| ext. Thermocouple RJ 1 / ext. Thermocouple RJ 2 | — Relevant for external reference junction, specification of constant external reference junction temperature Value range: -50 to 100 °C |

Menu: Device Info

| Menu / parameter | Description |
|--------------------------|----------------------------------|
| ... / Device Info | |
| Device ID | Displays device ID |
| Serial Number | Displays serial number |
| Software Version | Displays software version |
| Hardware Version | Displays hardware version |
| TAG | Displays measuring point tagging |
| Description | Displays a user-defined text |
| Operation Time | Displays operating hours |

Menu: Communication

| Menu / parameter | Description |
|----------------------------|---|
| ... / Communication | |
| TAG | Measuring point tagging <ul style="list-style-type: none"> 16 characters |
| Bus Address | Address range during bus operation Value range: 0 to 125 |
| Ident Number | PROFIBUS PA profile: selects ID numbers than can be used Manufacturer-specific: (IDENT__NUMBER_SELECT) only for PROFIBUS PA |
| Ident Number Profile | ID numbers used for profile with PROFIBUS PA <ul style="list-style-type: none"> 1*AI (0x9700) 2*AI (0x9701) 3*AI (0x9702) 4*AI (0x9703) |

... 11 Operation

... Parameter description PROFIBUS PA® and FOUNDATION Fieldbus®

Menu: Service Menu

| Menu / parameter | Description |
|--|---|
| ... / Service Menu | |
| Device temperature | Select the ' Device temperature ' submenu. |
| Sensor 1 | Select the ' Sensor 1 ' submenu. |
| Sensor 2 | Select the ' Sensor 2 ' submenu. |
| Op. Time / Temp. | Displays total operating hours and the operating hours within specific ranges of the device temperature. <ul style="list-style-type: none"> • Total: Total operating hours • < -40 °C: operating hours at < -40 °C • -40 to -20 °C: operating hours at -40 °C to -20 °C • -20 to 0 °C: operating hours at -20 °C to 0 °C • 0 to 20 °C: operating hours at 0 to 20 °C • 20 to 40 °C: operating hours at 20 to 40 °C • 40 to 60 °C: operating hours at 40 to 60 °C • 60 to 85 °C: operating hours at 60 to 85 °C • > 85 °C: operating hours at > 85 °C |
| Communication | Displays the communication quality <ul style="list-style-type: none"> • Excellent • Very good • Good • Poor • None |
| ... / Service Menu / Device temperature | |
| min | Drag indicator: minimum device temperature |
| max | Drag indicator: maximum device temperature |
| ... / Service Menu / Sensor 1 | |
| min | Drag indicator: minimum sensor temperature, sensor 1 |
| max | Drag indicator: maximum sensor temperature, sensor 1 |
| ... / Service Menu / Sensor 2 | |
| min | Drag indicator: minimum sensor temperature, sensor 2 |
| max | Drag indicator: maximum sensor temperature, sensor 2 |

Menu: Display

| Menu / parameter | Description |
|--|--|
| ... / Display | |
| Language | Selects the menu language <ul style="list-style-type: none"> • German • English |
| Contrast | Sets the display contrast Value range: 0 to 100 % |
| Operator Page 1 | Select the ' Operator Page 1 ' submenu. |
| Operator Page 2 | Select the ' Operator Page 2 ' submenu. |
| ... / Display / Operator Page 1 | |
| Line 1 | Selects the value displayed <ul style="list-style-type: none"> • Calculated value • Sensor 1 • Sensor 2 • Device temperature • AO Block |
| ... / Display / Operator Page 2 | |
| Line 1 | Selects the value displayed in Line 1 <ul style="list-style-type: none"> • Calculated value • Sensor 1 • Sensor 2 • Device temperature • AO Block |
| Line 2 | Selects the value displayed in Line 2 <ul style="list-style-type: none"> • Calculated value • Sensor 1 • Sensor 2 • Device temperature • AO Block |

Menu: Calibrate

| Menu / parameter | Description |
|------------------------|---|
| ... / Calibrate | |
| Reset Device | Device restarts without configuration changes |
| Reset with Defaults | Device restarts with factory settings applied |

... 11 Operation

Factory settings

Firmware settings

The transmitter is configured ex works.

HART® devices from SW-Rev. 3.00

These devices can be reset to the factory setting, as well as to the setting according to the customer order.

With the menu item “Factory reset” in the service menu, the factory settings are reset to the factory settings according to the following table (corresponds to standard configuration BS).

The menu item “Reset to Order” in the service menu is used to reset to the configuration ordered by the customer (default configuration BS, customer-specific configuration without special user characteristic BF or customer-specific configuration with special user characteristic BG).

Devices with PROFIBUS PA®, FOUNDATION Fieldbus® and HART® (all SW revisions)

The following table with the corresponding parameter values applies.

| Menu | Designation | Parameter | Factory setting |
|---------------|------------------------------|-----------------------------------|---|
| Device Setup | Write protection | – | No |
| | Input Sensor 1 | Sensor Type | Pt100 (IEC60751) |
| | | R-Connection | Three-wire |
| | | Measured Range Begin ¹ | 0 |
| | | Measured Range End ¹ | 100 |
| | | Engineering Unit | Degrees °C |
| | | Damping | Off |
| Process Alarm | | Fault signaling ¹ | To SW-Rev. 1.03: Overrange / high alarm 22 mA ¹ From SW-Rev. 3.00: Underrange / low alarm 3.5 mA ¹ |
| | Input Sensor 2 | Sensor Type | Off |
| | Input / output assignment | Measurement type | Sensor 1 |
| | TAG | – | – |
| | HART Burstmode ¹ | – | To SW-Rev. 1.03: TIXXX- ¹ |
| Display | Display Value | – | Process Variable |
| | Bargraph ¹ | – | Yes, output % ¹ |
| | Language | – | English |
| | Contrast | – | 50 % |
| Communication | HART Burstmode ¹ | Status ¹ | Off ¹ |
| | Bus Address ^{2 3} | – | 126 ² / 30 ³ |
| | Simulation mode ³ | – | Off ³ |
| | HART Protocol | – | HART 5 / 7 ⁴ |

¹ Only applies to HART transmitters

² Only applies to PROFIBUS PA transmitters

³ Only applies to FOUNDATION Fieldbus transmitters

⁴ The currently set HART protocol remains unchanged during the factory reset (all SW revisions).

12 Diagnosis / error messages

Diagnostic information

Monitoring of operating data

The transmitter saves the highest and lowest values for the electronic unit temperature as well as measured values from sensor 1 and sensor 2 in the non-volatile memory ('Drag Indicator').

| Value | Description |
|---|--|
| Supply voltage (HART devices before SW-Rev. 3.00) | Current supply voltage measured at the terminals of the transmitter in volts ($\pm 5\%$). |
| Loop current (HART devices from SW-Rev. 3.00) | Monitoring of the 4 to 20 mA loop current. |
| Max. elec. temp. | Highest detected internal temperature in °C that the transmitter was subjected to. This value cannot be reset. |
| Min. elec. temp. | Lowest detected internal temperature in °C that the transmitter was subjected to. This value cannot be reset. |
| Max. reading for sensors 1 / 2 | Largest measured value on Sensor 1 or 2. When changing the sensor type (e.g., Pt100 to thermocouple type K), the value is reset automatically. |
| Min. reading for sensors 1 / 2 | Smallest measured value on Sensor 1 or 2. When changing the sensor type the value is reset automatically. |
| Reset | The drag indicators for the sensor readings are all reset to the current measured value in each case. |

Operating hours statistics

| Value | Description |
|---|--|
| Operation Time | Total hours since commissioning that the supply voltage has been switched on for the transmitter. |
| Operation Time (according to unit temperature)* | The operating hours are categorized according to the measured internal temperature of the transmitter. Due to rounding and frequently switching the device on and off, the total of the individual values may differ slightly from the value displayed by the counter for operating hours. Values in the fields on the far left and right indicate operation of the transmitter outside the specified range. In this event, acknowledged properties of the transmitter might be limited, in particular, with respect to accuracy and service life. |


* For HART devices in tools such as FIM and DTM

... 12 Diagnosis / error messages


Calling up the error description

For devices with PROFIBUS PA, FOUNDATION Fieldbus and HART® from SW-Rev. 3.00


Additional details about the error that has occurred can be called up on the information level.

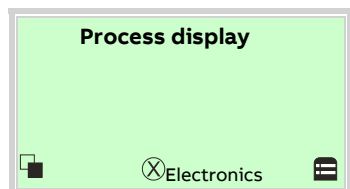

1. Use to switch to the information level (Operator Menu).

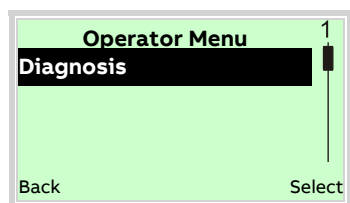

2. Use / to select the submenu 'Diagnosis'.
3. Confirm the selection with .

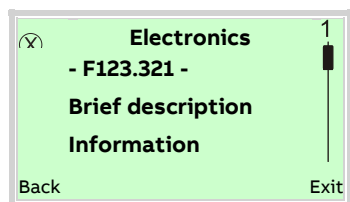

The error message is shown on the display according to priority.

The first line shows the area in which the error has occurred.

The second line shows the unique error number. It is made up of the priority (Fxxx) and the error position (.xxx)

The next lines show a brief description of the error and information on how to remedy it.

You absolutely need to scroll the display further to read the error message in more detail.

Note

For a detailed description of the error messages and information on troubleshooting, see the following pages.

Possible error messages – HART® devices to SW-Rev. 1.03

| Range | Displays the device status | Displays the DIAG. NO. | Cause | Remedy |
|------------------------------|----------------------------|------------------------|---|---|
| Electronics | F | 1 | Device defective | Replace the device |
| Electronics | S | 2 | Ambient temperature overshoot / undershot | Check environment; reposition measuring point if required |
| Electronics | F | 3 | EEPROM defective | Replace the device |
| Electronics | M | 4 | Electronics overload | Factory reset |
| Electronics | F | 5 | Memory error | Factory reset |
| Electronics | I | 7 | LCD display connected | Remove display |
| Installation / Configuration | I | 8 | Device write-protected | Remove write protection |
| Electronics | I | 9 | EEPROM busy | Wait for status information to finish processing |
| Electronics | F | 12 | Sensor input defective (communication) | Replace the device |
| Electronics | F | 13 | Sensor input defective (error) | Replace the device |
| Electronics | F | 14 | Sensor input defective (ADC error) | Replace the device |
| Installation / Configuration | C | 32 | Simulation mode | Exit simulation mode |
| Sensor | F | 34 | Measuring error, sensor 1 | Check sensor connection |
| Sensor | F | 35 | Short-circuit, sensor 1 | Check sensor connection |
| Sensor | F | 36 | Wire break, sensor 1 | Check sensor connection |
| Sensor | F | 37 | Range exceeded, sensor 1 | Check measuring limits |
| Sensor | F | 38 | Range undershot, sensor 1 | Check measuring limits |
| Installation / Configuration | I | 41 | Single-point adjustment active, sensor 1 | Terminate single-point adjustment |
| Installation / Configuration | I | 42 | Two-point adjustment active, sensor 1 | Terminate two-point adjustment |
| Sensor | F | 50 | Measuring error, sensor 2 | Check sensor connection |
| Sensor | F | 51 | Short-circuit, sensor 2 | Check sensor connection |
| Sensor | F | 52 | Wire break, sensor 2 | Check sensor connection |
| Sensor | F | 53 | Range exceeded, sensor 2 | Check measuring limits |
| Sensor | F | 54 | Range undershot, sensor 2 | Check measuring limits |
| Installation / Configuration | F | 65 | Configuration defective | Check configuration: A Wrong device B Measuring span is too small C Incorrect configuration data |

... 12 Diagnosis / error messages

... Possible error messages – HART® devices to SW-Rev. 1.03

| Range | Displays the device status | Displays the Cause DIAG. NO. | | Remedy |
|------------------------------|----------------------------|------------------------------|--|---|
| Sensor | M | 66 | No sensor 1 detected during redundancy configuration | Check connection |
| Sensor | M | 67 | No sensor 2 detected during redundancy configuration | Check connection |
| Sensor | M | 68 | Sensors exceeded specified drift window | Calibrate sensors |
| Installation / Configuration | C | 71 | Reconfiguration is running | Terminate reconfiguration |
| Operating conditions | F | 72 | Error in the application | Check configuration, connections; reset to factory settings |
| Installation / Configuration | I | 74 | Analog output adjustment active | Terminate compensation |
| Installation / Configuration | C | 75 | Analog output in simulation | Terminate simulation |
| Operating conditions | S | 76 | Values overshoot | Check parameters: A) Sensor limits overshoot B) Span is too small |
| Operating conditions | S | 77 | Limit HIGH HIGH | Upper limit value: alarm |
| Operating conditions | S | 78 | Limit LOW LOW | Lower limit value: alarm |
| Operating conditions | S | 79 | Limit HIGH | Upper limit value: warning |
| Operating conditions | S | 80 | Limit LOW | Lower limit value: warning |

Note

If the remedial measures listed for the error message do not improve the status of the device, please consult ABB Service.

Possible error messages – HART® devices from SW-Rev. 3.00

Note

The listed causes for a device status message correspond to the delivery status. They can be configured freely in the tools in the menu “Diagnosis/NAMUR configuration”, see interface description COM/TTX300/HART.

| Range | Device status message (on the display) | Cause | Remedy |
|---------------|---|----------------------|--|
| Sensor | Line resistance S1 too high | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S1 short-circuit | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S1 Wire break / sensor break | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S1 Single-point trim is active | Check function | |
| Sensor | S1 Two-point trim is active | Check function | |
| Sensor | Line resistance S2 too high | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S2 short-circuit | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S2 Wire break / sensor break | Maintenance required | Check sensor or replace / repair sensor |
| Sensor | S2 Single-point trim active | Check function | |
| Sensor | S2 Two-point trim active | Check function | |
| Sensor | Redundancy: S1 not available | Maintenance required | Check sensor or replace / repair sensor S1 |
| Sensor | Redundancy: S2 not available | Maintenance required | Check sensor or replace / repair sensor S2 |
| Sensor | Sensor drift detected | Maintenance required | Check Sensor/ connection / trim / drift parameter |
| Sensor | Application failure | Failure | Check sensor connection / check HART variable mapping |
| Operation | Diagnostics is simulated | Check function | Terminate / come out of simulation |
| Operation | Analog output fixed / simulated | Check function | Terminate / come out of simulation |
| Operation | Application warning | Check function | Load valid parameter restart (reset) check S1 / S2 |
| Electronics | Electronics temp. measurement failure | Failure | Restart (RESET) or replace transmitter |
| Electronics | Electronics temp. out of spec. | Out of specification | Observe spec. ambient temp. range |
| Electronics | Non-volatile data defect | Failure | Restart (RESET) or replace transmitter |
| Electronics | Non-vol. Memory Write cycles exceeded | Maintenance required | Restart (RESET) or replace transmitter |
| Electronics | Device not calibrated | Failure | Restart (RESET) or replace transmitter |
| Electronics | Electronics failure | Failure | Restart (RESET) or replace transmitter |
| Process | S1 over sensor range | Maintenance required | Check sensortype use diff. sensor if required |
| Process | S1 under sensor range | Maintenance required | Check sensortype use diff. sensor if required |
| Process | S2 over sensor range | Maintenance required | Check sensortype use diff. sensor if required |
| Process | S2 under sensor range | Maintenance required | Check sensortype use diff. sensor if required |
| Process | High limit: Alarm | Out of specification | Verify process or change limit value |
| Process | Low limit: Alarm | Out of specification | Verify process or change limit value |
| Process | High limit: Warning | Out of specification | Verify process or change limit value |
| Process | Low limit: Warning | Out of specification | Verify process or change limit value |
| Configuration | Parameterization / config. failure | Failure | Load valid param restart (RESET), reset to factory |

Note

If the remedial measures listed for the error message do not improve the status of the device, please consult ABB Service.

... 12 Diagnosis / error messages

Possible error messages – PROFIBUS PA® and FOUNDATION Fieldbus®

| Range | Device status message (on the display) | Cause | Remedy |
|----------------------|---|------------------------------|--|
| Sensor | Sensordrift | Outside of the specification | Sensor adjustment |
| Sensor | S1 line resistance too high | Maintenance required | Sensor 1: Remove corrosion at the connections or reduce line length. |
| Sensor | S1 short-circuit | Errors | Sensor 1: Rectify short-circuit or replace sensor 1 |
| Sensor | S1 wire break | Errors | Sensor 1: Rectify wire break or replace sensor 1 |
| Sensor | S2 line resistance too high | Maintenance required | Sensor 2: Remove corrosion at the connections or reduce line length. |
| Sensor | S2 short-circuit | Errors | Sensor 2: Rectify short-circuit or replace sensor 2 |
| Sensor | S2 wire break | Errors | Sensor 2: Rectify wire break or replace sensor 2 |
| Operating conditions | S1 measuring range overflow | Outside of the specification | Adapt S1 measuring range to suit measuring task |
| Operating conditions | S1 measuring range underflow | Outside of the specification | Adapt S1 measuring range to suit measuring task |
| Operating conditions | S2 measuring range overflow | Outside of the specification | Adapt S2 measuring range to suit measuring task |
| Operating conditions | S2 measuring range underflow | Outside of the specification | Adapt S2 measuring range to suit measuring task |
| Operating conditions | Device temperature out of spec. | Outside of the specification | Check environment; reposition measuring point if required |
| Electronics | Device error | Errors | Replace device |
| Electronics | Device not calibrated | Outside of the specification | Calibrate device |
| Electronics | Device being simulated | Function check | Terminate simulation |
| Electronics | Configuration error | Errors | Validate configuration |
| Sensor | Sensor 1 + 2 redundancy failure | Errors | Check sensor / sensor connection |
| Sensor | Sensor 1 redundancy: short-circuit | Maintenance required | Rectify short-circuit at sensor 1 or replace sensor 1 |
| Sensor | Sensor 1 redundancy: wire break | Maintenance required | Rectify break at sensor 1 or replace sensor 1 |
| Sensor | Sensor 2 redundancy: short-circuit | Maintenance required | Rectify short-circuit at sensor 2 or replace sensor 2 |
| Sensor | Sensor 2 redundancy: wire break | Maintenance required | Rectify break at sensor 2 or replace sensor 2 |

Note

If the remedial measures listed for the error message do not improve the status of the device, please consult ABB Service.

13 Maintenance

Safety instructions

CAUTION

Risk of burns due to hot measuring media

The device surface temperature may exceed 70 °C (158 °F), depending on the measuring medium temperature!

- Before starting work on the device, make sure that it has cooled sufficiently.

If transmitters are used as intended under normal operating conditions, no maintenance is required.

Cleaning

When cleaning the exterior of meters, make sure that the cleaning agent used does not corrode the housing surface and the gaskets.

When using the device in potentially explosive atmospheres, observe the notice on cleaning in **Protection against electrostatic discharges** on page 12.

14 Repair

Safety instructions

DANGER

Explosion hazard

Explosion hazard due to improper repair of the device.

- Faulty devices may not be repaired by the operator.
- The device may only be repaired by the ABB Service Department.

On-site repair of the transmitter or exchange of electronic components is not permissible.

Returning devices

Use the original packaging or a secure transport container of an appropriate type if you need to return the device for repair or recalibration purposes.

Fill out the return form (see **Return form** on page 75) and include this with the device.

In accordance with the EU Directive governing hazardous materials, the owner of hazardous waste is responsible for its disposal or must observe the following regulations for shipping purposes:

All devices delivered to ABB must be free from any hazardous materials (acids, alkalis, solvents, etc.).

Please contact Customer Center Service acc. to page 6 for nearest service location.

15 Recycling and disposal

Note



Products that are marked with the adjacent symbol may **not** be disposed of as unsorted municipal waste (domestic waste).

They should be disposed of through separate collection of electric and electronic devices.

This product and its packaging are manufactured from materials that can be recycled by specialist recycling companies.

Bear the following points in mind when disposing of them:

- As of 8/15/2018, this product will be under the open scope of the WEEE Directive 2012/19/EU and relevant national laws (for example, ElektroG - Electrical Equipment Act - in Germany).
- The product must be supplied to a specialist recycling company. Do not use municipal waste collection points. These may be used for privately used products only in accordance with WEEE Directive 2012/19/EU.
- If there is no possibility to dispose of the old equipment properly, our Service can take care of its pick-up and disposal for a fee.

16 Specification

Note

The device data sheet is available in the ABB download area at www.abb.com/temperature.

17 Additional documents

Note

Declarations of conformity of the device are available in the download area of ABB at www.abb.com/temperature. In addition, these are also included with the device in case of ATEX-certified devices.

Trademarks

HART is a registered trademark of FieldComm Group, Austin, Texas, USA

PROFIBUS and PROFIBUS PA are registered trademarks of PROFIBUS & PROFINET International (PI)

FOUNDATION Fieldbus is a registered trademark of FieldComm Group, Austin, Texas, USA.

18 Appendix

Return form

Statement on the contamination of devices and components

Repair and/or maintenance work will only be performed on devices and components if a statement form has been completed and submitted.

Otherwise, the device/component returned may be rejected. This statement form may only be completed and signed by authorized specialist personnel employed by the operator.

Customer details:

Company:

Address:

Contact person:

Telephone:

Fax:

Email:

Device details:

Type:

Serial no.:

Reason for the return/description of the defect:

Was this device used in conjunction with substances which pose a threat or risk to health?

☐ Yes

☐ No

If yes, which type of contamination (please place an X next to the applicable items):

☐ biological

☐ corrosive / irritating

☐ combustible (highly / extremely combustible)

☐ toxic

☐ explosive

☐ other toxic substances

☐ radioactive

Which substances have come into contact with the device?

1.

2.

3.

We hereby state that the devices/components shipped have been cleaned and are free from any dangerous or poisonous substances.

Town/city, date

Signature and company stamp

ABB Measurement & Analytics

For your local ABB contact, visit:
www.abb.com/contacts

For more product information, visit:
www.abb.com/temperature

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.