

## Table of Contents

<b>1.</b>	<b>Introduction.....</b>	<b>1</b>
1.1	Scope.....	1
1.2	References.....	1
1.3	HSE RIO Transducer Block & Function Block Relationship:.....	1
1.3.1	Conceptual Diagram.....	1
1.3.2	Handling of Invalid References in CHANNEL_TAG* Parameters.....	2
1.3.3	Changing References in CHANNEL_TAG* Parameters.....	2
1.3.4	Unused CHANNEL_TAG* Parameters.....	2
<b>2.</b>	<b>HSE-RIO Transducer Block Model.....</b>	<b>3</b>
<b>3.</b>	<b>HSE-RIO Function Block Model.....</b>	<b>4</b>
3.1	Block Overview.....	4
3.2	Multiple Binary Input Block (MBI-64).....	5
3.2.1	Overview.....	5
3.2.2	Schematic.....	5
3.2.3	Description.....	5
3.2.4	Supported Modes.....	5
3.2.5	Alarm Types.....	5
3.2.6	Mode Handling.....	5
3.2.7	Status Handling.....	5
3.2.8	Initialization.....	5
3.2.9	Multiple Binary Input Function Block Access.....	6
3.3	Multiple Binary Output Block (MBO-64).....	6
3.3.1	Overview.....	6
3.3.2	Schematic.....	6
3.3.3	Description.....	6
3.3.4	Supported Modes.....	7
3.3.5	Alarm Types.....	7
3.3.6	Mode Handling.....	7
3.3.7	Status Handling.....	7
3.3.8	Initialization.....	7
3.3.9	Multiple Binary Output Function Block Access.....	8
3.4	Multiple Analog Input Function Block (MAI-16).....	9
3.4.1	Overview.....	9
3.4.2	Schematic.....	9
3.4.3	Description.....	9
3.4.4	Supported Modes.....	9
3.4.5	Alarm Types.....	9
3.4.6	Mode Handling.....	9
3.4.7	Status Handling.....	9
3.4.8	Initialization.....	9
3.4.9	Multiple Analog Input Function Block Access.....	10
3.5	Multiple Analog Output Function Block (MAO-16).....	11
3.5.1	Overview.....	11
3.5.2	Schematic.....	11
3.5.3	Description.....	11
3.5.4	Supported Modes.....	12
3.5.5	Alarm Types.....	12
3.5.6	Mode Handling.....	12
3.5.7	Status Handling.....	12
3.5.8	Initialization.....	12
3.5.9	5.8 Multiple Analog Output Function Block Access.....	12
3.6	Block Parameters.....	13
3.6.1	Parameter Attribute Definitions.....	13
3.6.2	Parameter Descriptions.....	14
3.7	Multiple Output Function Blocks Options.....	16
3.7.1	MO_FSTATE_OPTS_16.....	16
3.7.2	MO_FSTATE_OPTS_64.....	16

---

3.7.3	MO_POWERUP_OPTS_16.....	16
3.7.4	MO_POWERUP_OPTS_64.....	17
3.7.5	FSTATE_ST_16.....	17
3.7.6	FSTATE_ST_64.....	17