

## Table of Contents

<b>1.</b>	<b>Introduction.....</b>	<b>1</b>
1.1	Purpose.....	1
1.2	Scope.....	1
1.3	References.....	1
1.4	Input Transducer Block Overview.....	1
<b>2.</b>	<b>Standard Pressure with Calibration Transducer Block .....</b>	<b>2</b>
2.1	Overview.....	2
2.2	Schematic.....	2
2.3	Description.....	2
2.4	Supported Modes.....	3
2.5	User Selectable Modes.....	3
2.6	Alarm Types.....	3
2.7	Mode Handling.....	3
2.8	Initialization.....	3
2.9	Channel Assignments.....	4
2.10	Standard Pressure with Calibration Simple Device Access.....	4
2.11	Standard Pressure with Calibration Complex Device Access .....	5
2.12	Parameter Default Values.....	5

## Table of Figures

FIGURE 1 — PRESSURE TRANSDUCER BLOCK SCHEMATIC .....2